


Symphony


12 Series - 220V 60Hz/230V 50Hz Ice and Water Dispensers

Order parts online
www.follettice.com


Installation, Operation and Service Manual

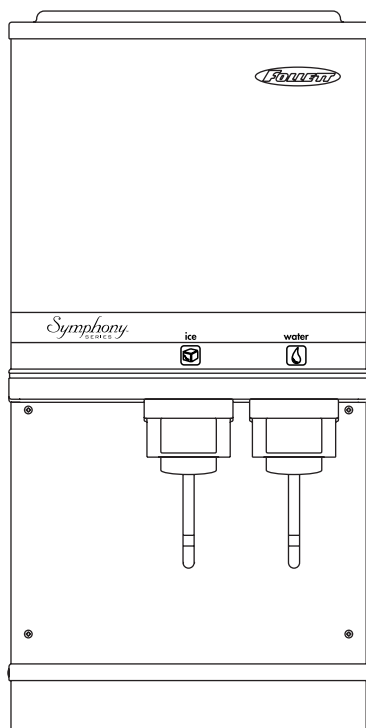

C/E12CI400A
countertop dispenser

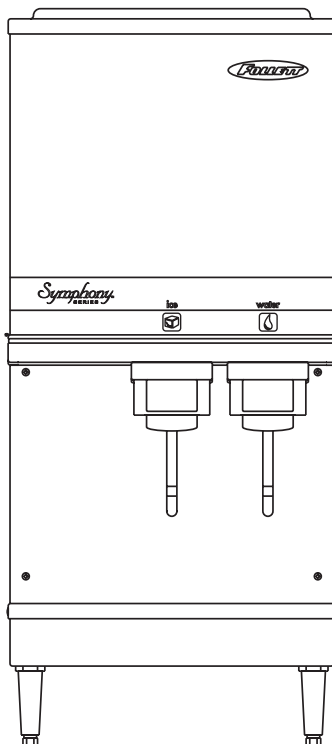

C/E12CI400A
countertop dispenser with
SensorSAFE™ actuation
(shown with legs accessory)

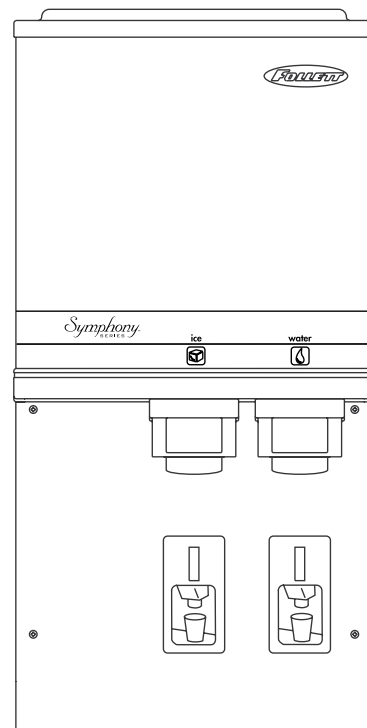

C/E12HI400A
wall mount dispenser (available
with or without drain pan)

**Following installation, please forward this manual
to the appropriate operations person.**

Table of contents

Welcome to Follett Corporation	3
Important cautions	3
Specifications	4
Installation	5
Installing countertop dispensers without legs	5
Installing countertop dispenser with legs accessory	6
Installing wall mount dispensers	7
User information	10
Cleaning and sanitizing procedures	10
Dispenser cleaning	10
Icemaker cleaning and sanitizing	11
Start-up following cleaning	12
Service information	13
Wiring diagram – lever model	14
Wiring diagram – SensorSAFE model	15
Icemaker operational and diagnostic sequences	16
Refrigeration cycle diagram	21
Icemaker capacity chart	22
Icemaker data	22
Refrigeration system data and requirements	23
Dispenser troubleshooting – lever models	24
Dispenser troubleshooting – SensorSAFE models	25
Icemaker troubleshooting	26
Disassembly and replacement instructions	28
Replacement parts	32

Follett Corporation Equipment Return Policy

Follett equipment may be returned for credit under the following conditions:

1. The equipment is new and unused.
2. A return authorization number has been issued by customer service within 30 days after shipment.
3. Follett receives the equipment at the factory in Easton, PA within 30 days after issuance of the return authorization number.
4. The equipment must be returned in Follett packaging. If the packaging has been damaged or discarded, Follett will forward, at the customer's expense, new packaging.

Note: Return freight charges are the responsibility of the customer. If equipment is returned and is damaged because of improper packaging, Follett Corporation will not be held responsible.

Credit will be issued when:
The equipment has been inspected by Follett and deemed suitable to be returned to stock.

Note: A 15% restocking charge will be deducted from the credit. If the cost to return the product to stock exceeds 15%, the actual cost will be deducted.

Welcome to Follett


Follett equipment enjoys a well-deserved reputation for excellent performance, long-term reliability and outstanding after-the-sale support. To ensure that this equipment delivers that same degree of service, we ask that you review the installation portion of this manual before beginning to install the unit. Our installation instructions are designed to help you achieve a trouble-free installation. Should you have any questions or require technical help at any time, please call our technical service group at (610) 252-7301.

Before you begin

After uncrating and removing all packing material, inspect the equipment for concealed shipping damage. If damage is found, notify your shipper immediately and contact Follett Corporation for help in filing a claim, if necessary.

Check your paperwork to determine which model dispenser you have. Follett model numbers are designed to provide information about the type and capacity of Follett ice dispensing equipment. Following is an explanation of model numbers.


E12CI400A

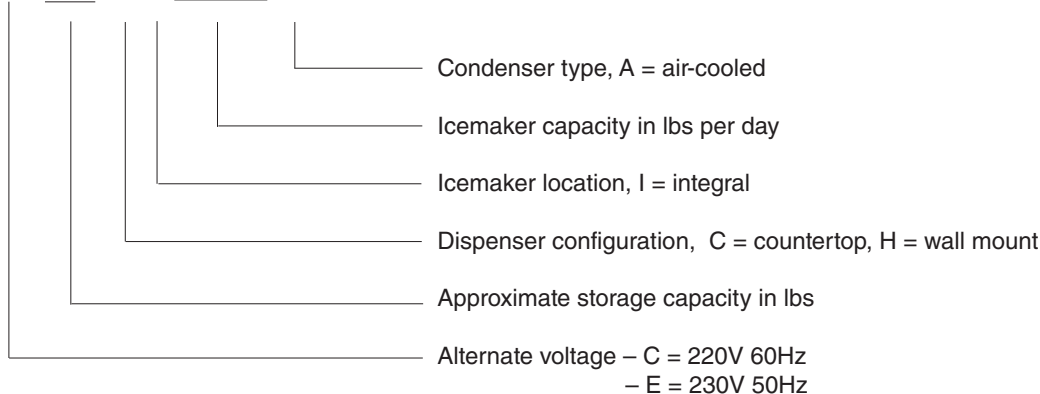

Important cautions

- Do NOT tilt any unit farther than 30° off vertical plane during uncrating or installation.
- Dispenser bin area contains mechanical, moving parts. Keep hands and arms clear of this area at all times. If access to this area is required, power to unit must be disconnected first.
- Follett recommends installation of an activated carbon filter in icemaker inlet water line.
- Ice is slippery. Maintain counters and floors around dispenser in a clean and ice-free condition.
- Ice is food. Follow recommended cleaning instructions to maintain cleanliness of delivered ice.
- Do not block right side air intake or top air exhaust.
- Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- Do NOT use mechanical devices or other means to accelerate the defrosting process.
- To avoid a hazard due to instability of the appliance it must be fixed according to instructions.
- The appliance must be positioned so the plug is accessible.
- If the cord is damaged it must be replaced by special service agent.

Specifications

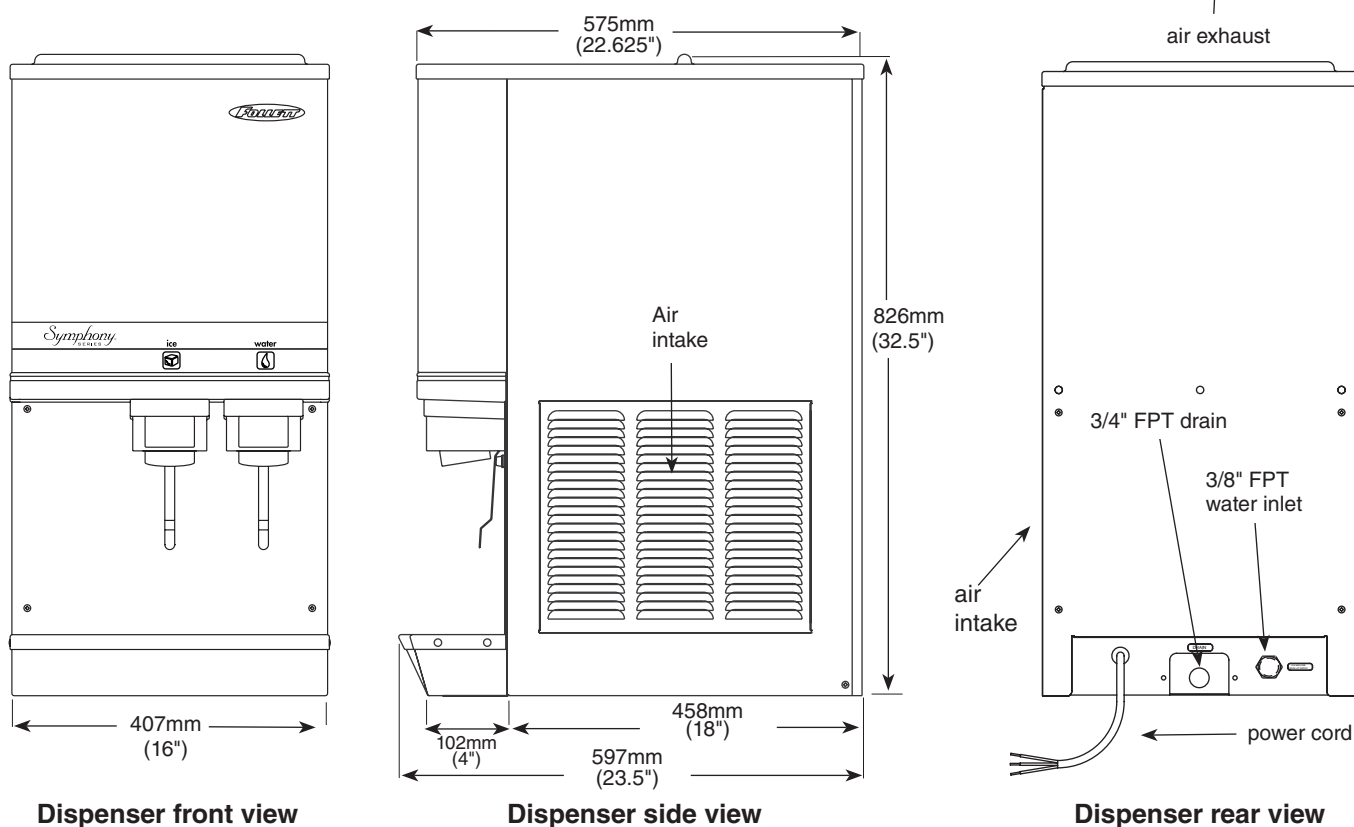

Electrical

220V 60Hz, 1 phase, 6.5 amps

230V 50Hz, 1 phase, 6.5 amps

Furnished with 1.8m (6 ft) power cord

Ambient

Air temp	38°C/100°F Max.	10°C/50°F Min. (Best performance below 80°F/27°C)
Water temp	32°C/90°F Max.	4°C/40°F Min. (Best performance below 70°F/21°C)
Water pressure	5Bar Max./70 P.S.I.	.7 Bar/10 P.S.I. Min.

Plumbing

	C/E12CI400A	C/E12HI400A
Dispenser drain	3/4" FPT	3/4" FPT
Water inlet	3/8" FPT	3/8" FPT

Note: Water shut-off recommended within 3m (10 ft) of dispenser. Drain to be hard-piped and insulated. Maintain at least 20mm per 1m run (1/4" per foot) of slope.

Ventilation clearances


6" (153mm) on right side of dispenser, 6" (153mm) at top for ventilation and 12" (305mm) at top recommended for service.

Note: Do not block right side air intake or top air exhaust


Dry weight

79.4kg (175 lbs)

**Fig. 2 – Bottom exiting utilities
(countertop units)**

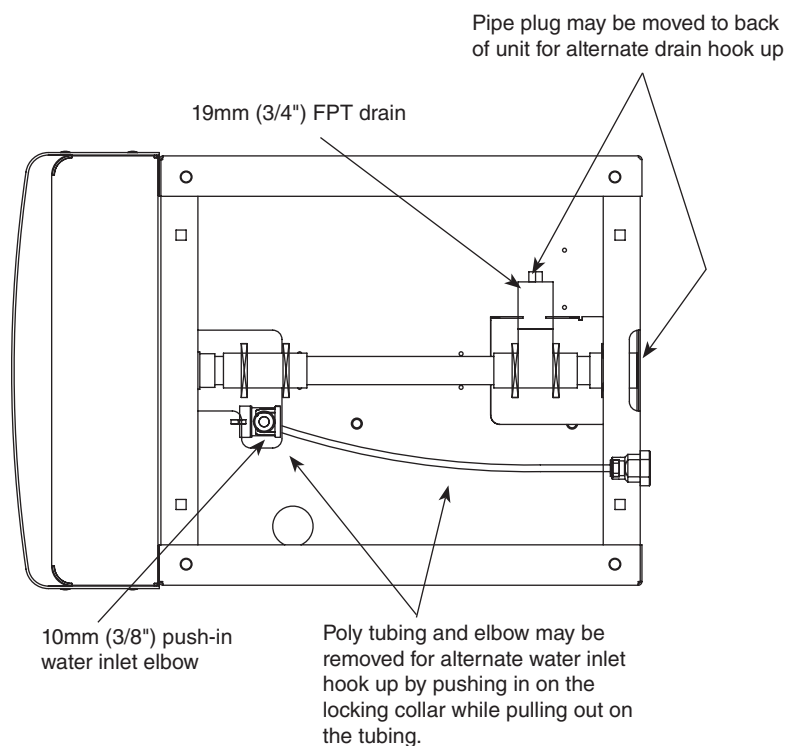


**Fig. 3 – Rear exiting utilities
(countertop units)**

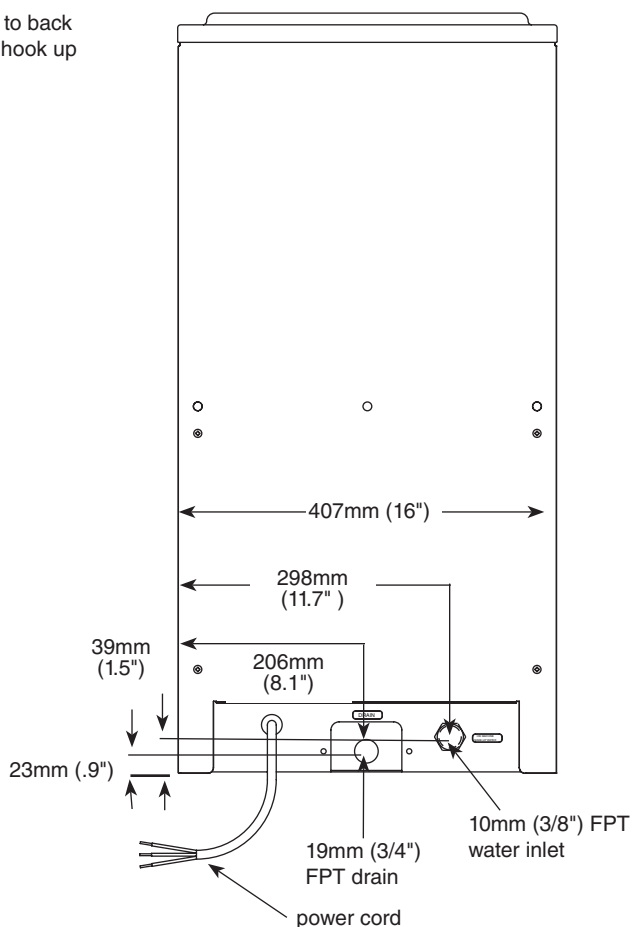

Installing countertop dispensers with legs accessory

1. Carefully tip dispenser back to expose underside and block up in place.
Note: Do NOT tilt unit farther than 30° off vertical plane.
2. Screw legs (shipped taped to drain pan of dispenser) into dispenser bottom, taking care to seat legs securely against underside of dispenser.
Note: Countertop dispensers that sit on legs (not bolted to counter) can be inadvertently moved. Care should be taken when operating and cleaning to avoid accidents.
3. Attach bottom panel and hardware to bottom of dispenser with supplied screws (Fig. 4).
4. Position unit in desired location and adjust bullets on legs to level in both directions.
5. Make final connections.

Fig. 4 – Bottom panel assembly

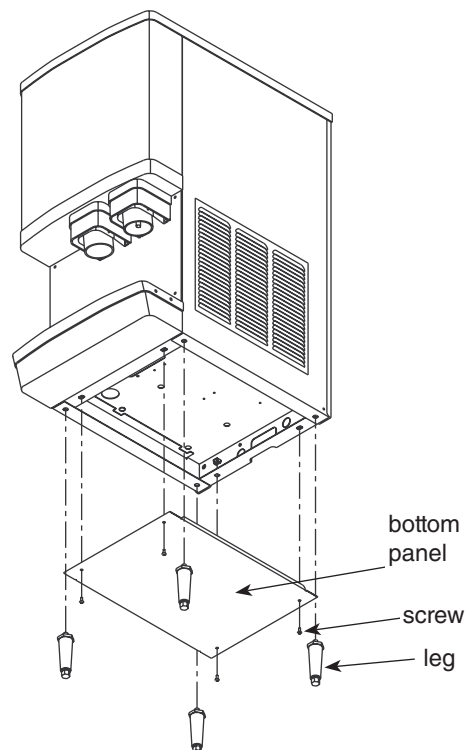

Installing wall mount dispensers

Notes:

No drain pan is provided since the dispenser is intended to be installed above a sink. (Contact Follett if a drain pan is desired.)

SensorSAFE actuation is standard. (Contact Follett if lever actuation is desired. A deeper cabinet will be needed.)

Recommended minimum counter depth and mounting height shown on Fig. 7 ensures that ice will drop into sink.


See Fig. 6 for model dimensions. The dimensions include the 13mm (.5") mounting bracket supplied with the unit.

1. Cut utility hole in wall as shown (Fig. 10).
2. Mount support bracket to wall using fasteners of sufficient strength (fasteners not included, see Fig. 6).
3. Rough in water and drain lines (Fig. 10).
4. Lift dispenser onto support bracket, positioning unit so that hook on back of dispenser is captured by support bracket angle (Fig. 7).
5. Install two (2) supplied 3/8"-16NC screws through bottom of support bracket into bottom of dispenser (Fig. 5).
6. Make final connections.
7. Attach bottom panel and hardware to bottom of dispenser (Fig. 8).

Fig. 5 – Wall mount bracket and fastener requirements




WALL PREPARATION: Wall and fasteners must be of sufficient strength to carry weight of unit (185 lbs (83.9kg)). *Hardware for this is not included.*

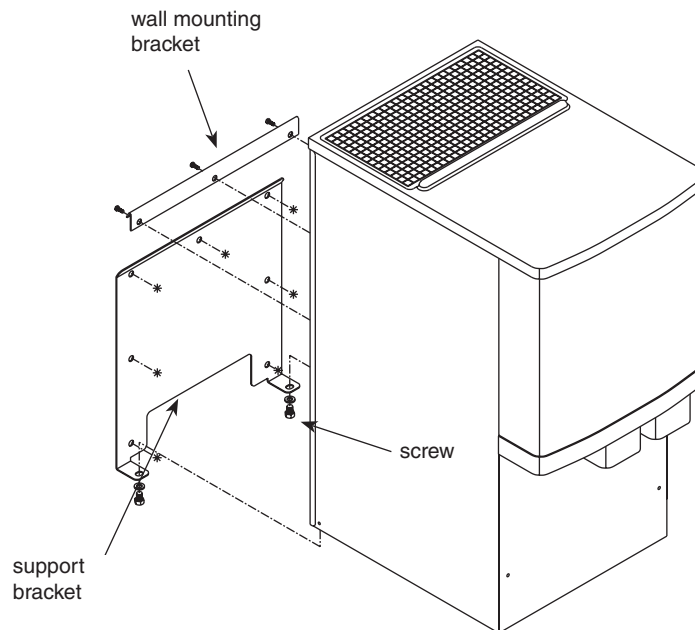


Installing wall mount dispensers

Fig. 6 – Wall mounting dimensions

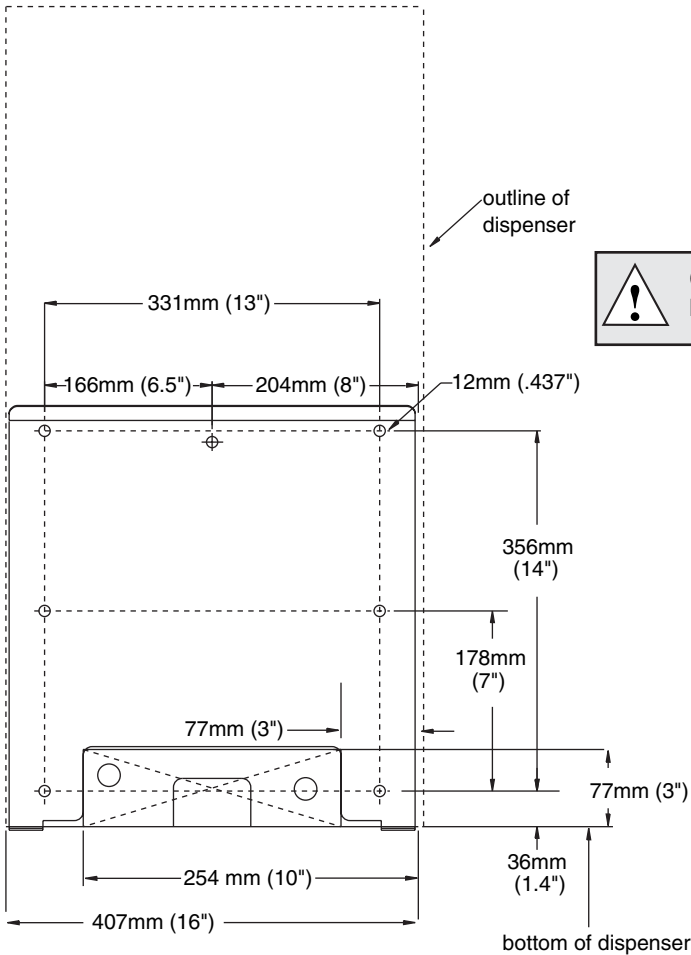

Caution: Do NOT rest dispenser weight on bottom of support bracket.

Fig. 7 – Wall mount side view

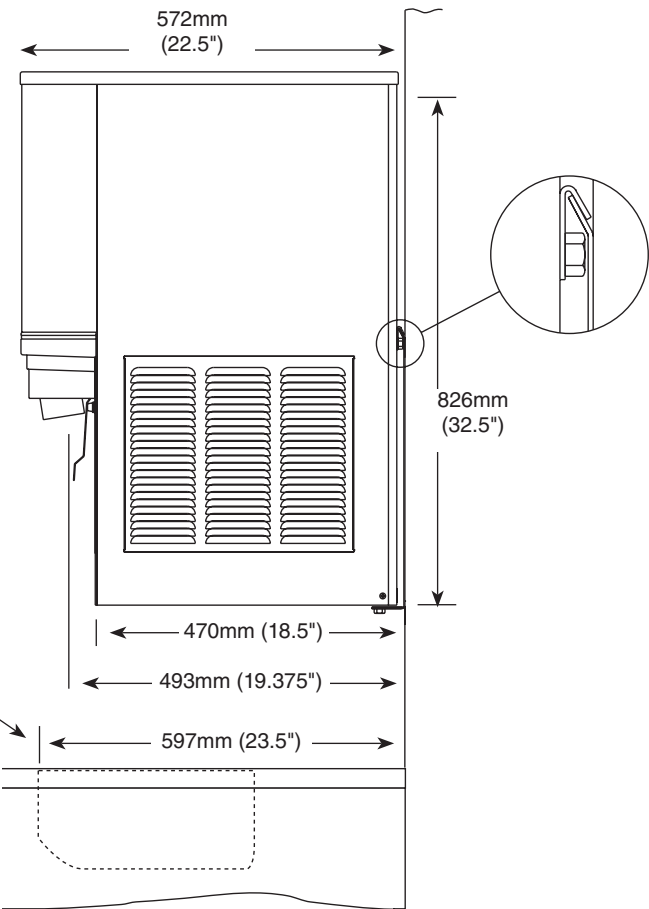

minimum distance to sink front

Fig. 8 – Wall mount unit bottom panel assembly

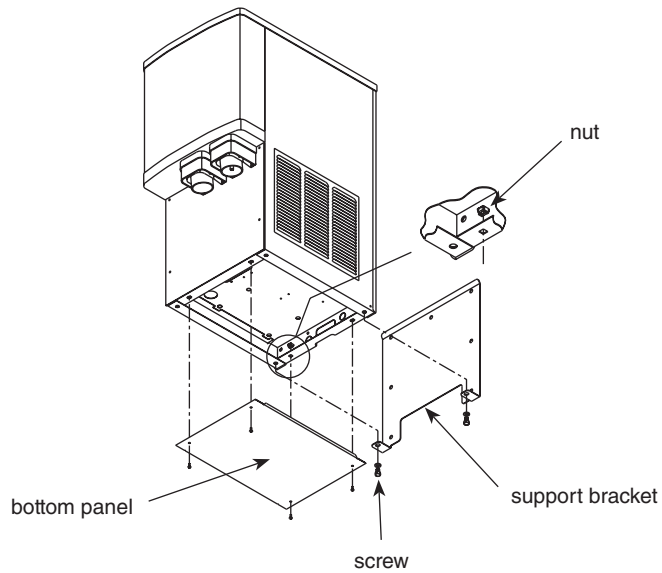


Fig. 9 – Wall mount bottom view



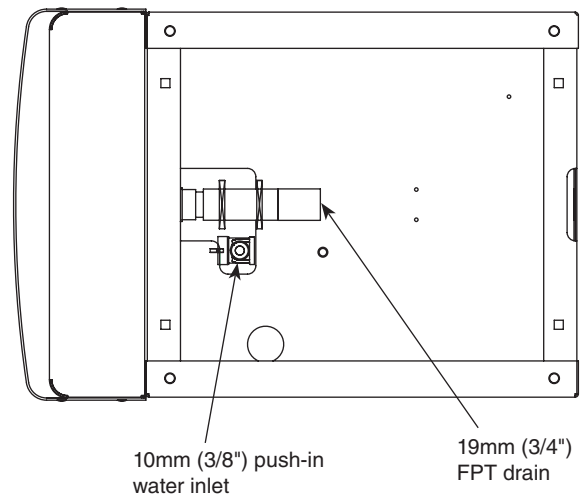


Fig. 10 – Front view of wall mount bracket – utility location

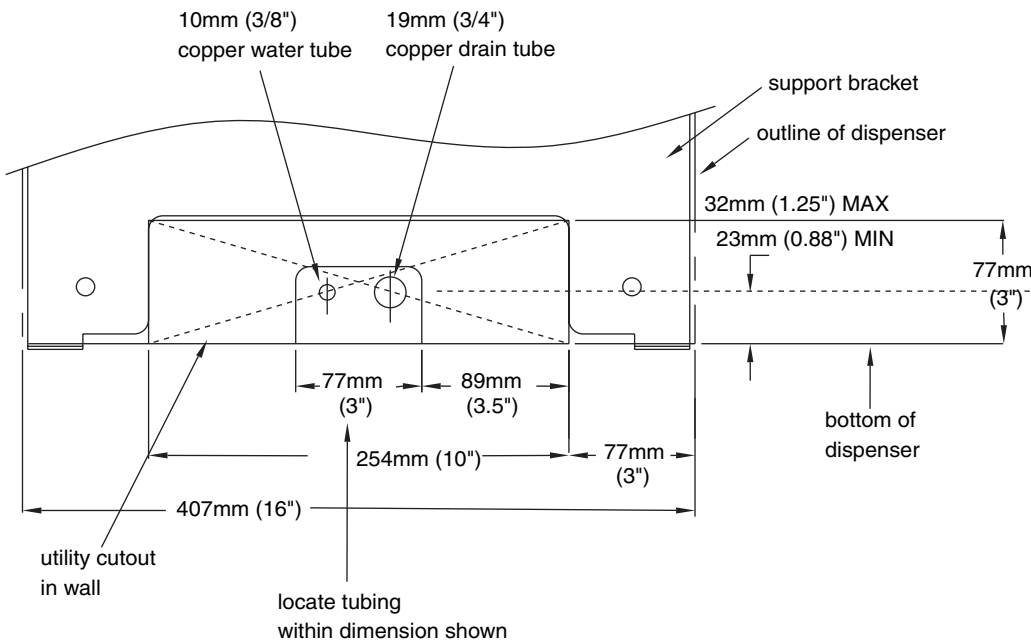

Side view of utilities exiting wall

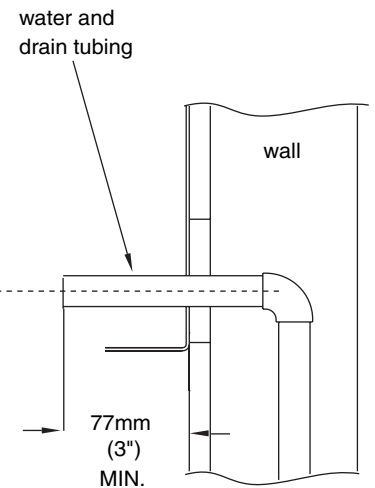

User information

How the dispenser works

Follett's 12 series automatic-load ice and water dispensers are equipped with Follett's 181kg (400 lb)/day icemaker. In the continuous icemaking process, water freezes to the inside wall of the evaporator. A rotating stainless steel auger carries the ice to the top of the evaporator where it is compressed and extruded through an outlet port. The ice is then pushed through a tube to the storage hopper. When the hopper is full, a bin thermostat opens and shuts the icemaker off. When the dispense mechanism is activated, a dispense motor is turned on, causing the wheel to turn. This moves ice to the dispense chute where it drops by gravity into the container held below the chute.

How the SensorSAFE accessory works

Follett's SensorSAFE accessory maximizes sanitation and minimizes the possibility of cross-contamination by eliminating physical contact between the cup or container and dispenser. Sensors in the panel use reflected infrared light to detect the presence of the container and send a signal to a control board which then activates the appropriate components for ice or water dispensing.

The SensorSAFE package includes a cleaning switch under the left side of the front cover which temporarily shuts off dispensing to allow cleaning of the panel and lenses. If the switch is not turned back on after cleaning, the dispenser automatically resets after two minutes for normal operation.

SensorSAFE also includes a time limit safety feature which automatically stops ice dispensing after one minute of continuous dispensing. Dispensing can be resumed by moving the container away from the dispenser and returning it to the activation zone.

Cleaning and sanitizing procedures

Solution A: Prepare cleaning solution (200 ppm of available chlorine content) of Ecolab Mikro-chlor Cleaner or equal chlorinated detergent. Solution temperature must be 24°C – 52°C (75°F – 125°F).

Solution B: Prepare sanitizing solution (50 ppm of available chlorine content) of Ecolab Mikro-chlor Cleaner or equal chlorinated detergent. Solution temperature must be 24°C – 52°C (75°F – 125°F).





Follett recommends following the periodic cleaning schedule below to ensure the quality of ice provided. Use only recommended cleaning solutions. Do not use solvents, abrasive cleaners, metal scrapers or sharp objects.



Warning – Always disconnect power before cleaning.

Dispenser cleaning: start-up and quarterly intervals

1. Remove all ice from storage hopper.
2. Remove center thumbscrew, locking plate, two wingnuts and backing plate from front of storage hopper.
3. Remove stud assembly, agitator, spacer, baffle, wheel and drive bar in this sequence.
4. Remove dispense chute.

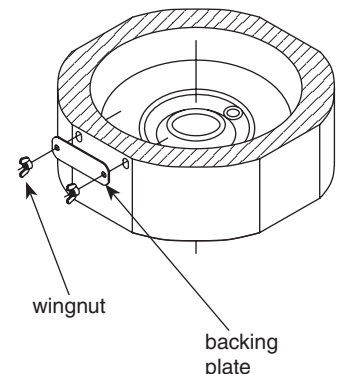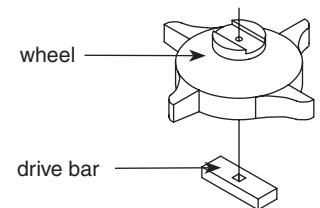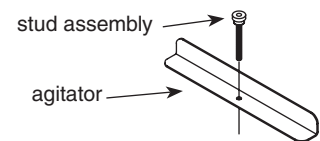

5. Wipe lid, wheel, baffle, inside of storage area and dispense chute with damp cloth wrung out in Solution A.
6. Rinse all above items with damp cloth and wring out in clear water.
Note: To avoid possible damage to motor assembly, use a damp cloth only to clean storage hopper. Do not allow water to run through center hole in bottom of hopper.
7. Sanitize all above items with damp cloth wrung out in Solution B. Do not rinse.
8. Pour 284ml (1 cup) household bleach into drain pan, followed by 3.8L (1 gallon) hot tap water to flush drains.
9. Reinstall all parts.

Dispenser grille and drain pan – weekly intervals

1. Remove grille and wash with Solution A. Rinse thoroughly.
2. Pour 282ml (1 cup) household bleach into drain pan, followed by 3.8L (1 gallon) of hot tap water to flush drains.

Splash panel front, SensorSAFE dispensers

1. Deactivate dispensing by pressing and releasing clean switch located on left side of unit under top front cover.
2. Clean lens using a soft cloth and mild, non-abrasive, non-chlorine based cleaner.
3. Reactivate dispensing by pressing and releasing clean switch again.

Icemaker cleaning & sanitizing

Preventive maintenance

Periodic cleaning of Follett's icemaker system is required to ensure peak performance and delivery of clean, sanitary ice. The recommended cleaning procedures which follow should be performed at least as frequently as recommended below and more often if environmental conditions dictate.

Cleaning of the condenser can usually be performed by facility personnel. Cleaning of the icemaker system in most cases should be performed by your facility's maintenance staff or a Follett authorized service agent. Regardless of who performs the cleaning, it is the operator's responsibility to see that this cleaning is performed according to the schedule below. Service problems resulting from lack of preventive maintenance will not be covered under the Follett warranty.

Cleaning procedures

Recommended monthly cleaning of condenser

1. Use a vacuum cleaner or stiff brush to carefully clean condenser coils of air-cooled icemakers to ensure optimal performance.
2. When reinstalling counter panels in front of remote icemakers, be sure that ventilation louvers line up with condenser air duct.

Recommended semi-annual cleaning of icemaking system

Icemaking system can be cleaned in place without disassembling water system. Cleaning should be performed at least every 6 months, and more often if local water conditions dictate.

1. Disconnect power to icemaker.
2. Remove any icemaker panels required to gain access to water reservoir and electrical control box.
3. Turn compressor switch on electrical box of icemaker to OFF position.
4. Remove water reservoir cover and block up reservoir float or close water supply valve.
5. Drain water from reservoir by releasing evaporator drain line from float reservoir bracket and removing plug from drain line.

6. Following manufacturer's instructions, prepare one gallon (3.8L) of Follett SafeCLEAN Ice Machine Cleaner (one 7 oz packet) or equivalent. Solution temperature must be at least 120° F (48.9° C).
Warning: Most ice machine cleaners contain citric or phosphoric acid that can cause skin irritation. Read caution label on product and follow instructions carefully.
7. Plug drain hose, replace drain line in reservoir bracket and pour part of cleaning solution into reservoir, filling it almost to overflowing.
8. Remove stainless steel compression nozzle and drain lines. Submerge in a cup of cleaning solution while cleaning rest of system. (Flake icemakers have no compression nozzle and drain lines.)
Caution: To avoid potential pitting, do not soak parts in SafeCLEAN for more than 45 minutes.
9. Restore power to icemaker (gearmotor will run; compressor and fan will not).
10. After 15 minutes, turn power OFF; drain solution from reservoir and evaporator.
11. Fill reservoir almost to overflowing with clean, 120° F (48.9° C) water, and drain. Repeat three times.
12. Following manufacturer's instructions, prepare 1 gallon (3.8L) of 200ppm 5.25% Sodium Hypochlorite solution (mix 1 oz household bleach to 2 gallons water) or equivalent. Solution temperature must be at least 120° F (48.9° C).
13. Rinse compression nozzle in clean water and submerge in a cup of sanitizing solution while following steps 14-19.
14. Connect ice transport tube directly onto evaporator outlet port without compression nozzle.
Note: If bin will not be cleaned at this time, place a large pan in bin storage area to catch ice or connect a separate ice transport tube to evaporator and divert ice into separate container.
15. Fill reservoir almost to overflowing with sanitizing solution.
16. Restore power to icemaker (gearmotor will run; compressor and fan will not).
17. After 10 minutes, turn compressor switch to ON position.
18. As unit starts to make ice, continue to pour sanitizing solution into reservoir, maintaining level just below reservoir overflow.
19. Continue to make ice with sanitizing solution for 20 minutes.
20. Turn power to icemaker OFF.
21. Disconnect transport tube from evaporator outlet port. Rinse compression nozzle in clean water and reinstall on evaporator outlet. Reconnect transport tube to compression nozzle.
22. Drain any remaining sanitizing solution from evaporator.
23. Fill reservoir almost to overflowing with clean, 120° F (48.9° C) water, and drain. Repeat three times.
24. Unblock float (or open water supply valve) and replace reservoir cover; restore power to icemaker and ensure compressor switch is in ON position. Make ice for at least 15 minutes to flush any remaining solution from system (remote icemakers with long ice transport hoses may take longer to flush out). Discard this and all ice made during sanitizing.
25. Inspect evaporator drain pan and drain line and remove any accumulated scale build up.
26. Replace any panels removed prior to cleaning.

Start-up following cleaning

1. Clean and sanitize ice storage area of dispenser in accordance with instructions above before making ice.
2. Turn icemaker on and begin to make ice (icemaker should start immediately with power and bin signal supplied).
3. After approximately 30 minutes, test dispenser for proper dispensing.

Service

Important preliminary information

Follett's icemaker consists of four distinct functional systems.

- Refrigeration system
- Water system
- Harvesting system
- Electrical control system

These four systems work together to accomplish the production and harvesting of ice. A problem in any one of these system areas will result in improper operation of the entire ice production cycle. When troubleshooting the icemaker, it is important to analyze the entire system operation to determine which system is not functioning properly, then pinpoint the component within that system that is malfunctioning. Determine what corrective action must be taken before making any adjustments or replacing any components.

Note: When performing electrical service, always use a meter to determine whether or no components being serviced are energized.

The icemaking process

The Follett icemaker uses a stainless steel jacketed evaporator and operates on a continuous freezing cycle. Water is supplied to the evaporator from the water reservoir where the water level is controlled by a float valve. This valve also shuts off the water supply when the icemaker is not running.


When the icemaker is running, a layer of ice forms on the interior surface of the evaporator. This ice is continuously removed by a rotating (12 RPM) auger. The auger carries the ice upward into the cavity formed by the top bearing housing and the compression loop, where it is compressed to remove excess water. When the ice reaches the desired hardness it rotates within the cavity and is forced through a discharge port and compression nozzle and into the ice transport tube. The discharge tube and compression nozzle are slightly restricted to further compress the ice and produce the desired high quality. As the formation of ice continues, ice in the transport tube is pushed through the tube to the storage compartment in the ice dispenser or ice storage bin.

A solid state control board located in the electrical box of the icemaker controls the normal operation of the icemaker and monitors gearmotor torque on an ongoing basis. This control board will shut down the icemaker should an over torque condition occur. It is very important that you familiarize yourself with the operational sequences detailed in this manual before attempting to service the icemaker.

Access to electrical box and control board

The 12 series electrical box has been designed to slide out for easy access to the control board and more convenient troubleshooting.


1. Remove top and front panels of dispenser (for panel removal instructions).
2. Remove electrical box cover.
3. Pull electrical box toward front of unit.

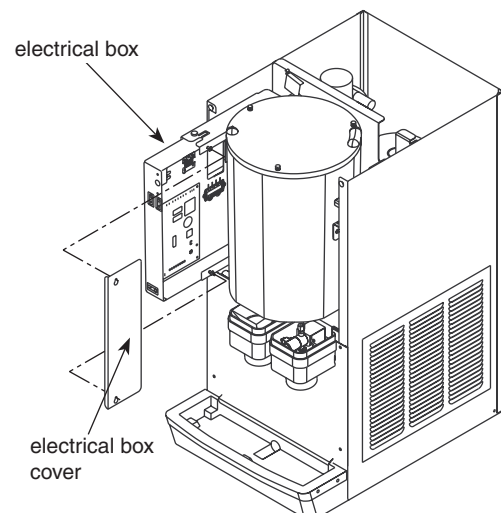

Wiring diagram – lever model

How the unit works — lever model

The dispense wheel motor is energized through the power, dispense and cover interlock switches. The bin signal circuit is completed through the normally closed contacts of the bin thermostat and the bin signal switch. When ice builds up around the bin thermostat, the contacts open, cutting the bin signal circuit.

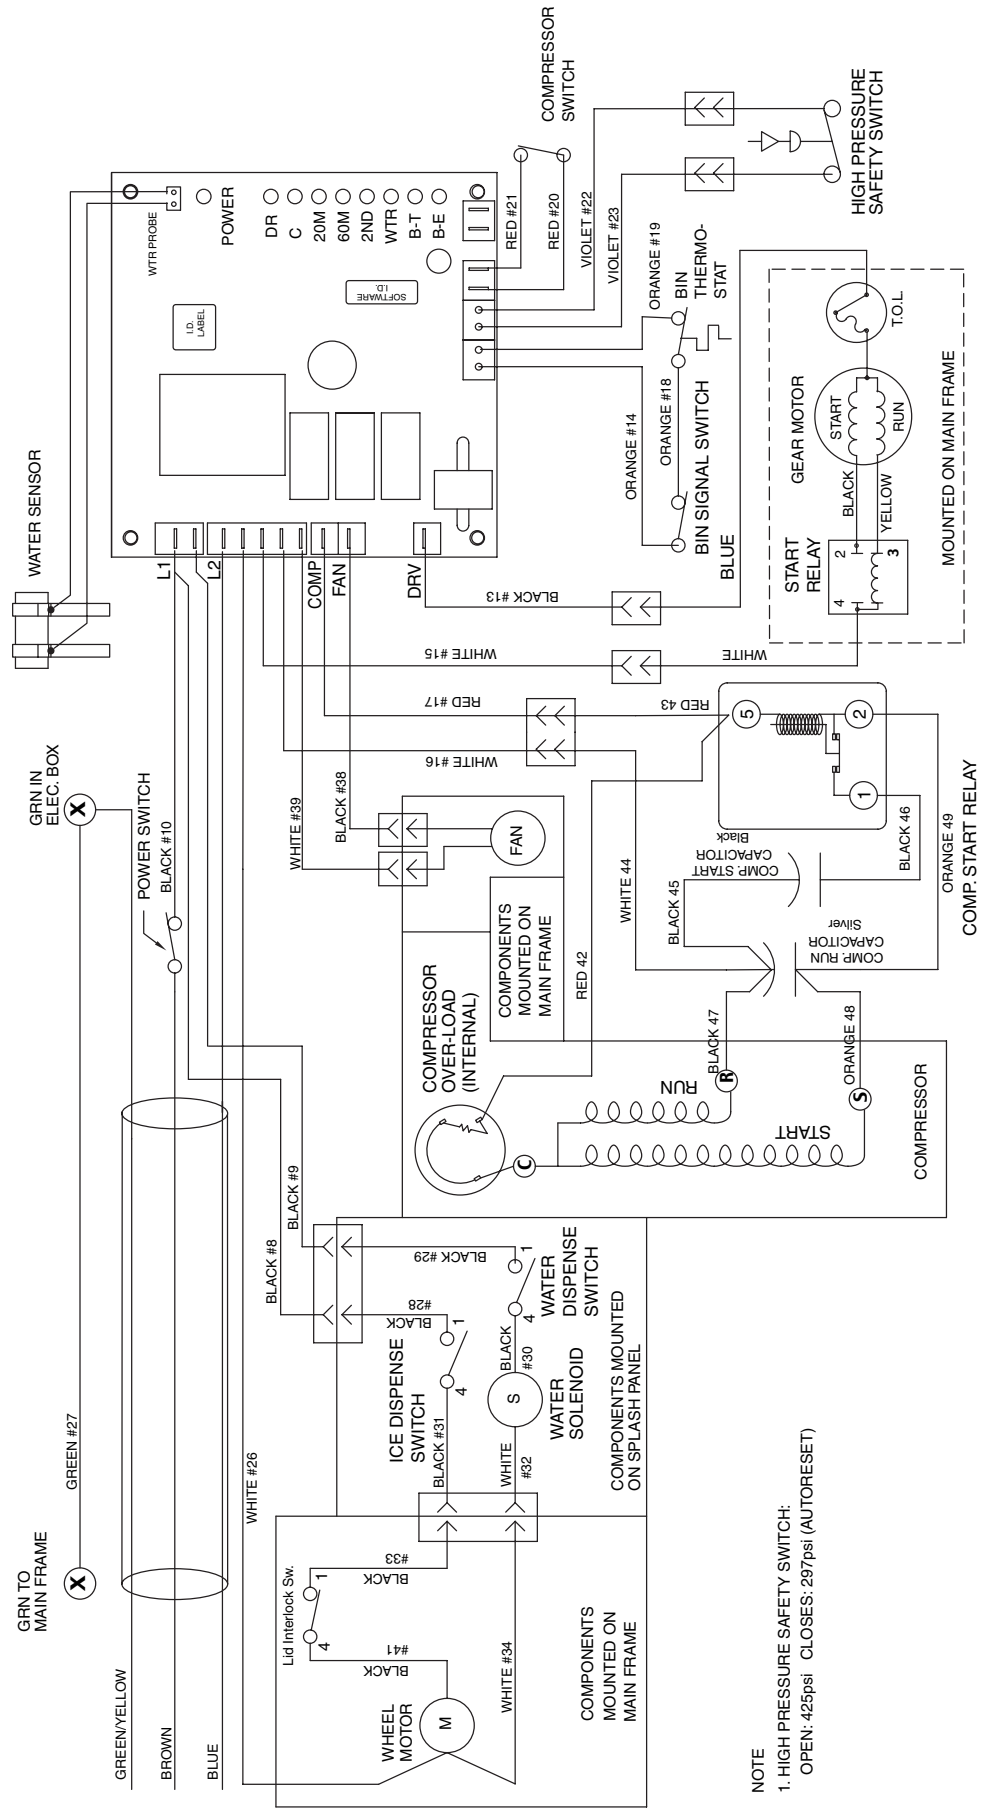

Wiring diagram – SensorSAFE model


How the unit works — SensorSAFE model

SensorSAFE™ models provide “touchless” ice and water dispensing. When a container is placed within the actuation zone below the ice or water chute, an invisible, randomly-generated infrared signal is emitted, reflected off the container and detected by the sensor. The sensor then sends a signal to the control board to activate the appropriate components to dispense ice or water. LEDs on the board indicate when the board is receiving a signal from the sensors.

A safety, shut-off feature automatically shuts off dispensing after one minute of continuous activation. Dispensing can be restarted by moving the container away and then returning it to the actuation zone.

Dispensing can be temporarily suspended by depressing and releasing the clean switch, located under the left side of the top front cover. Depressing and releasing the button a second time will return the dispenser to normal operating state. If the clean switch is not depressed a second time, the dispenser will automatically resume normal dispense operation (CLN LED goes out) after two minutes. An LED on the control board will light to indicate that the dispensing has been suspended by activation of the clean switch.

The bin signal circuit is completed through the normally closed contacts of the bin thermostat and the bin signal switch. When ice builds up around the bin thermostat, the contacts open, cutting the bin signal.

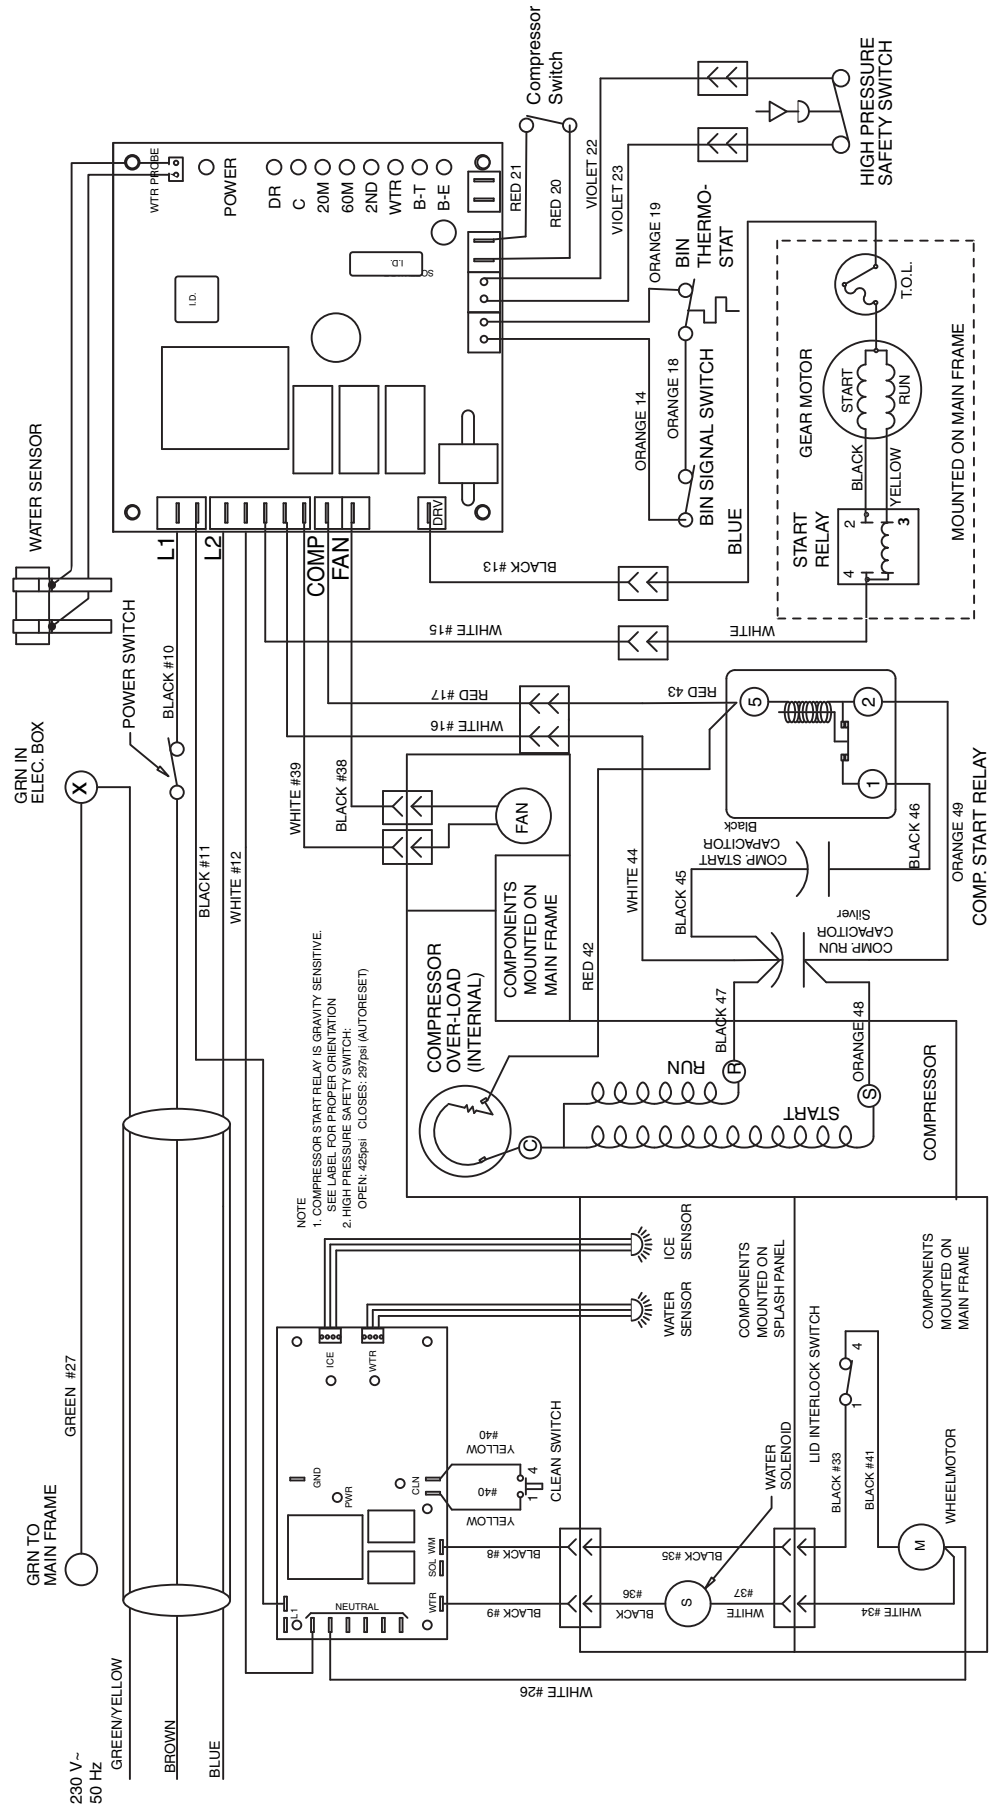

Icemaker operational and diagnostic sequences


The wiring diagrams that follow illustrate the circuitry of Follett icemakers used with 12 series ice dispensers. Both normal operation (Stages 1 – 6) and non-normal diagnostic sequences showing torque-out (Stages 7 – 10) for use in troubleshooting are shown.

Circuitry notes

- Compressor switch should read closed in ON position.
- Bin signal is 16V DC.
- Flashing water LED at any time indicates that water signal to board has been lost for more than one second.
- Ten-second delay: There is a 10 second delay in reaction to loss of water (WTR) or bin (B-E) signals. If signals are not lost for more than 10 seconds, no reaction will occur.


Normal operation – Stage 1

Power is supplied to L1 of the control board. The ice level control in the dispenser is closed and calling for ice, completing the bin signal circuit to the control board. The control board will now go through the start-up sequence. Less than 30 seconds will elapse as the water sensor located in the float reservoir checks for water in the reservoir. The bin empty LED (B-E), and power LED (PWR) will be on.

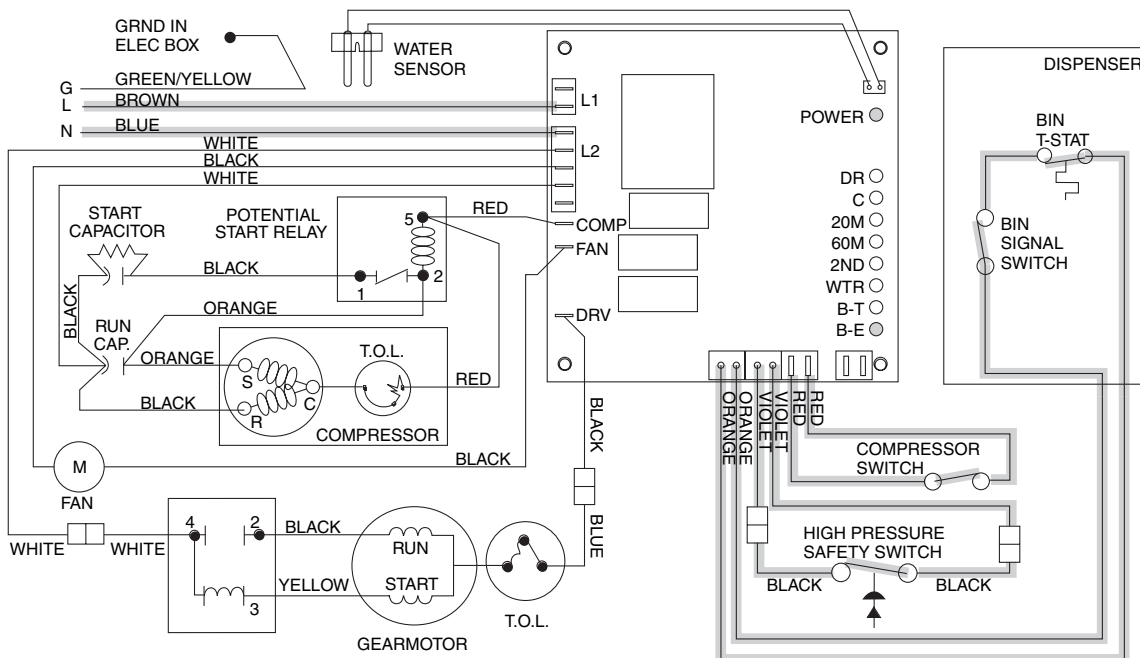


Normal operation – Stage 2

The water sensor verifies water in the float reservoir. The water OK LED (WTR) comes on. At the same time, the gearmotor, compressor and condenser fan motor come on, lighting the drive LED (DR) and compressor LED (C). The gearmotor is started through a current style relay that is pulled in by the initial high current draw of the run winding. The compressor is started with the start winding being energized through the normally closed contacts of the potential relay, starting capacitor, and the run capacitor. The PWR, BE and WTR LED remain on.

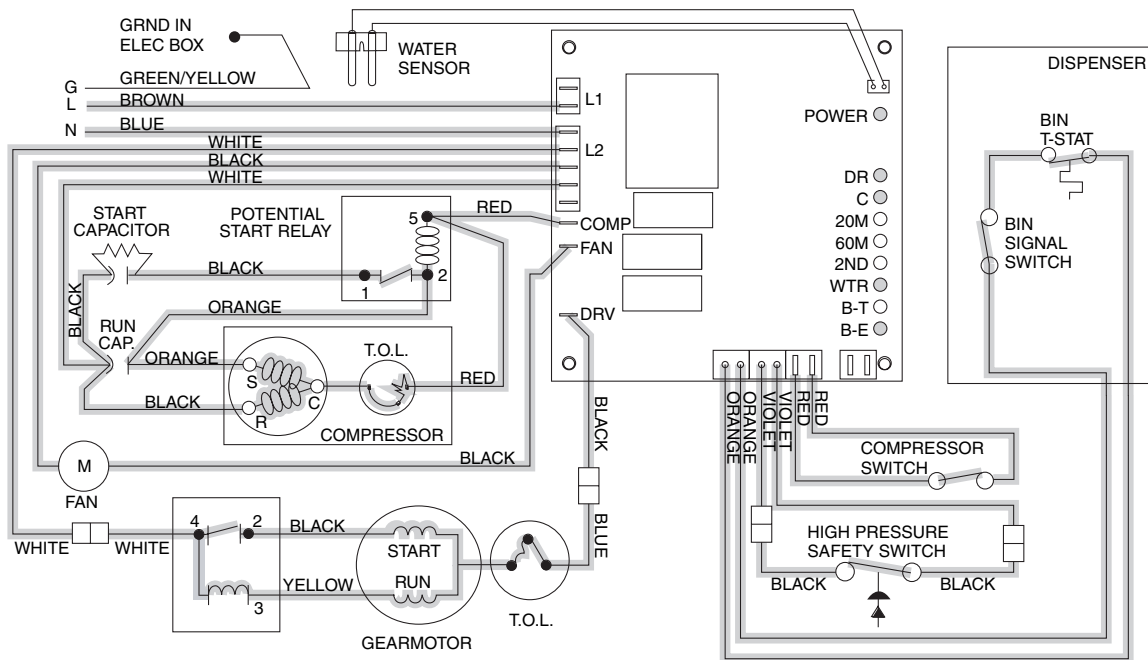


Normal operation – Stage 3

After the initial high current draw drops off, the gearmotor start relay contacts open, dropping out the start winding. As the compressor comes up to normal running speed, the compressor start relay contacts open and the starting capacitor drops out. The start winding remains energized through the run capacitor. The icemaker is now in a normal icemaking mode. The icemaker will begin to produce ice and continue to produce ice until the bin level control in the ice dispenser is satisfied. The PWR, B-E, DR, C and WTR LEDs are all on.

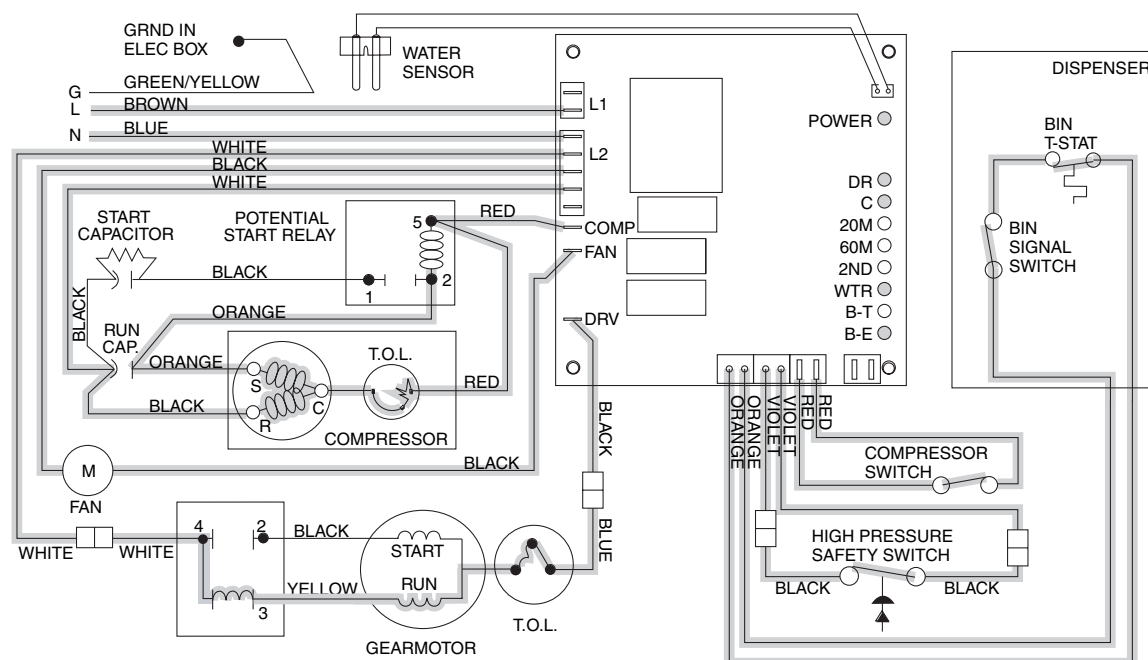


Normal operation – Stage 4

Once the ice level control opens, the B-E LED goes out. After a 10 second delay the compressor LED (C), compressor and fan motor go off. (Should the ice level control not remain open for 10 seconds, the icemaker will continue to run.) The gearmotor continues to run and the DR LED remains on for 60 seconds. The purpose of this function is to drive the remaining ice out of the evaporator and to boil off any refrigerant remaining in the evaporator. The bin timer LED (BT) comes on, starting the twenty minute off cycle time delay.

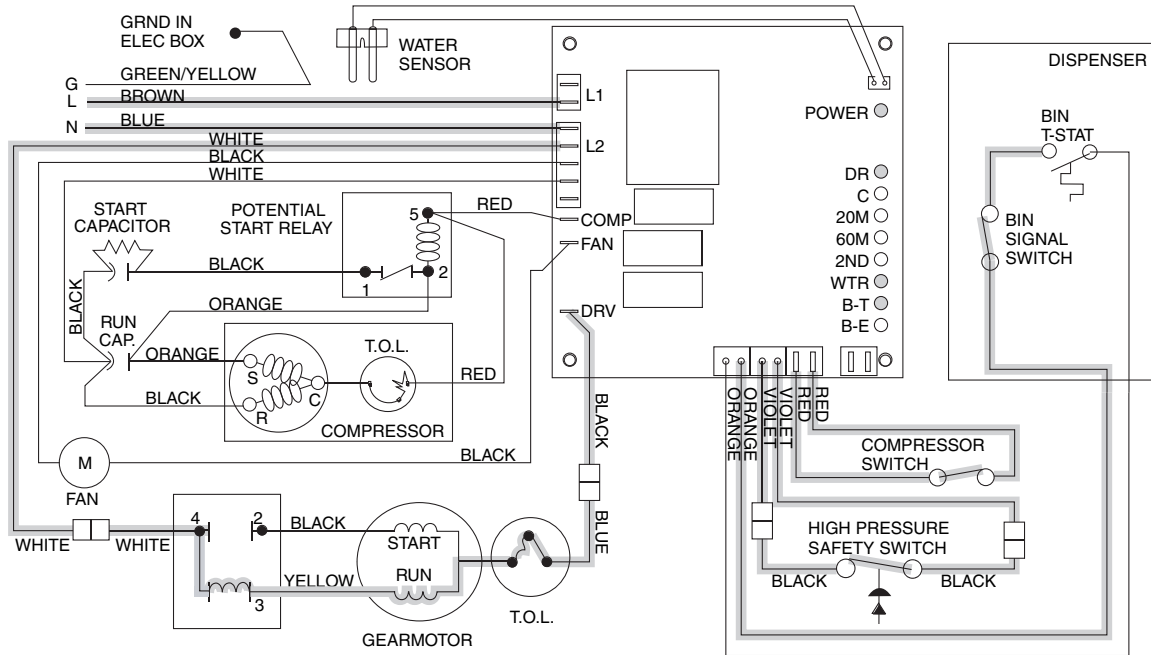


Normal operation – Stage 5

The drive motor now shuts down and the DR LED is off. The B-T LED remains on for 20 minutes. The icemaker will not start while the B-T LED is on. To restart the icemaker for troubleshooting purposes, depress the reset button to clear the control board.

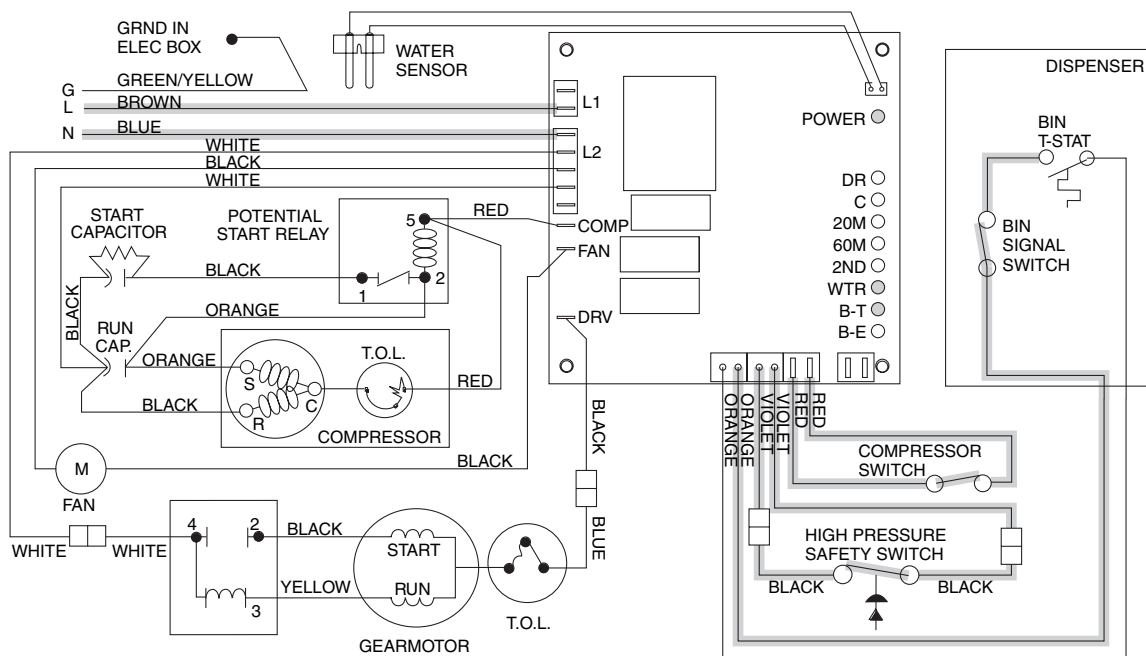


Normal operation – Stage 6

When the dwell time of 20 minutes has expired, the B-T LED goes off. The icemaker goes through the normal start-up sequence when the bin level control signals the control board for ice. The WTR LED will remain on as long as the water sensor in the float reservoir senses water.

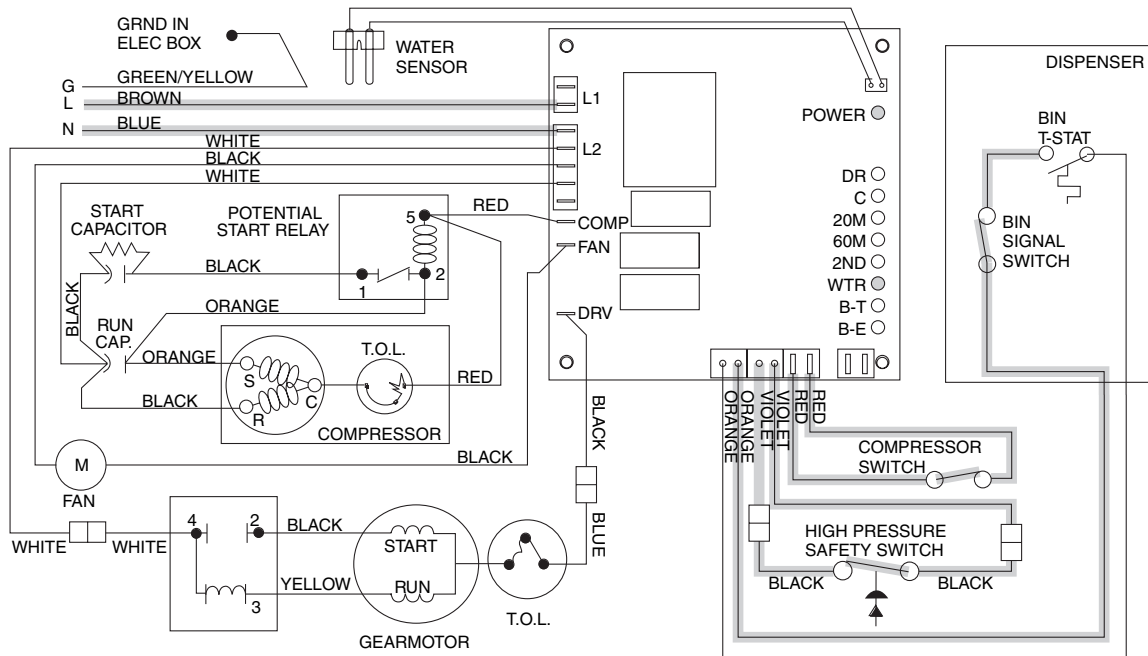


Diagnostic sequence – Stage 7

The 20 minute error LED (20M) is on, indicating that the control board has sensed an over-torque condition (above 2.5 AMPS on the gearmotor). The 20M LED remains on for 20 minutes after an over-torque condition has occurred. The icemaker remains off as long as the 20M LED is on. When the 20M LED goes off, the control board will try to go through a normal start-up sequence. The WTR LED remains on as long as the water sensor in the float reservoir senses water.

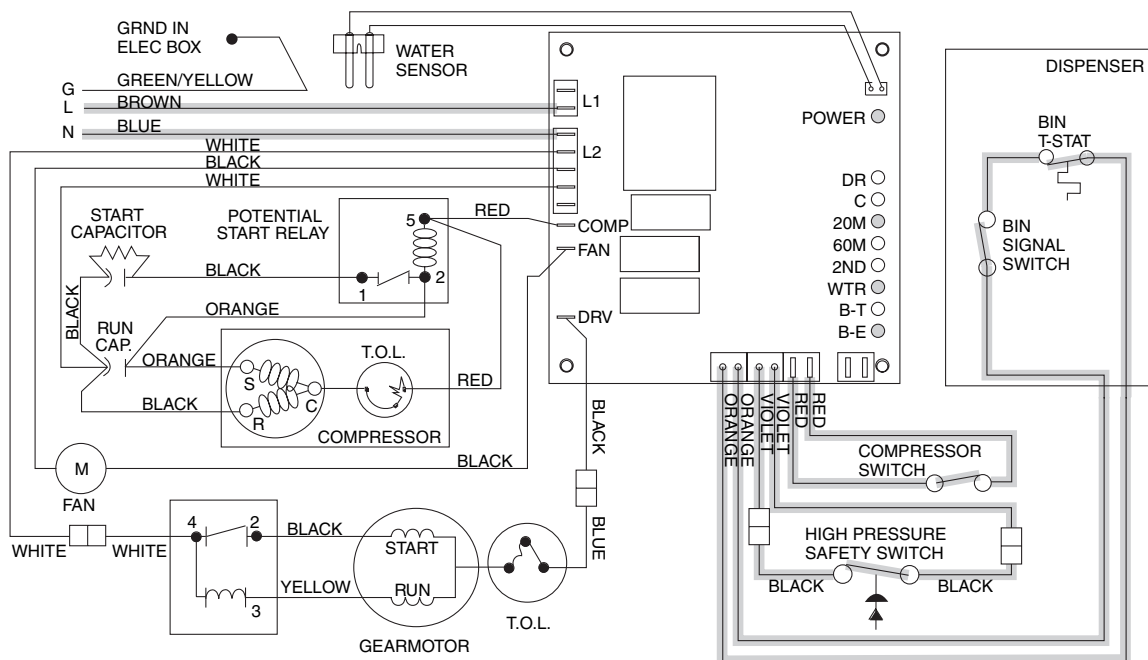


Diagnostic sequence – Stage 8

If the restart is successful the 20M LED goes off, the 60 minute timer LED (60M) comes on. The 60M LED will remain on for 60 minutes from restart. A lighted 60M LED indicates the icemaker has experienced an over-torque condition. If the icemaker runs without problems for 60 minutes and no additional torque errors occur, the 60M LED goes off and the icemaker continues normal operation.

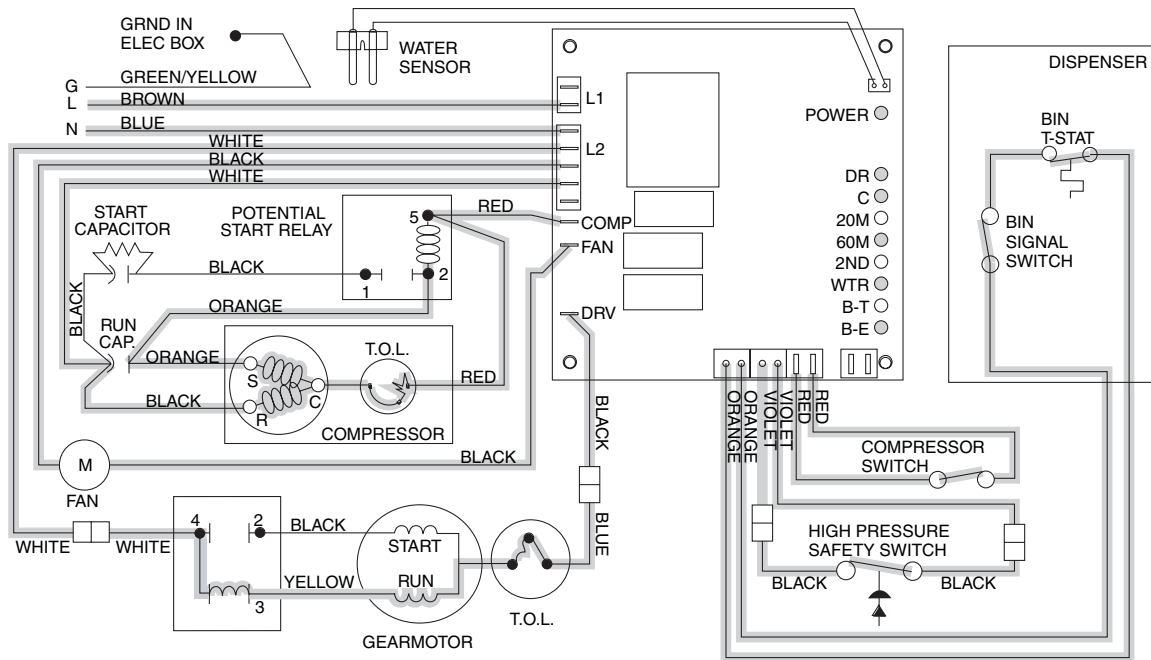


Diagnostic sequence – Stage 9

The second error (2ND) LED comes on if an over-torque condition occurs while the 60M LED is still lit. The 2ND LED indicates two consecutive over-torque situations have occurred. The icemaker will be shut down at this time and will not restart unless the manual reset button is depressed.

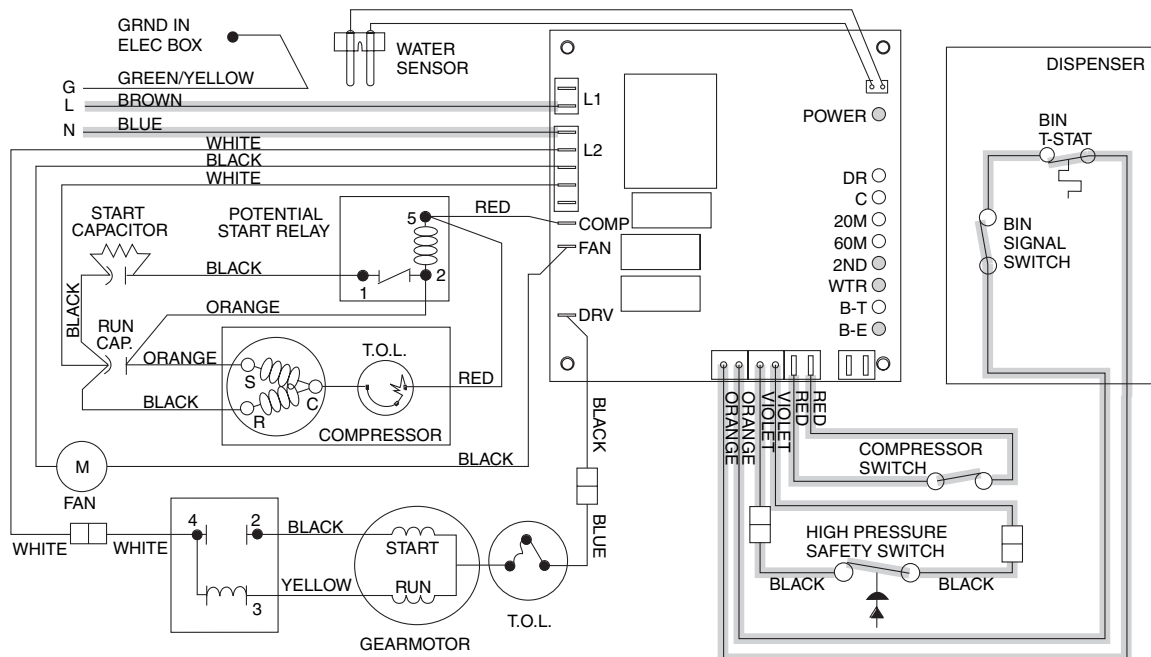


Diagnostic sequence – Stage 10

If the water level in the float reservoir drops to an unacceptable level, the WTR LED goes out, shutting the icemaker off. Also, the BT LED comes on, preventing the icemaker from restarting for twenty minutes. If water is restored, the WTR LED comes back on and flashes to alert the technician that water to icemaker has been lost. The icemaker restarts at the end of the 20 minute time delay. The flashing WTR LED can be cleared by pressing the reset button.

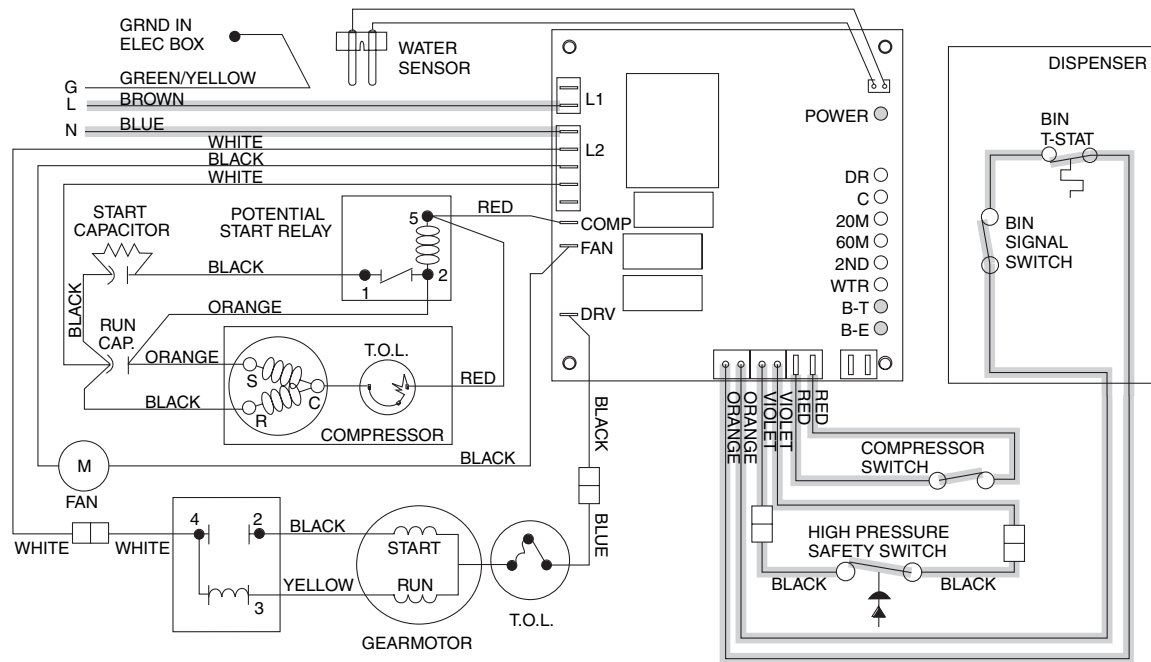

Refrigeration cycle

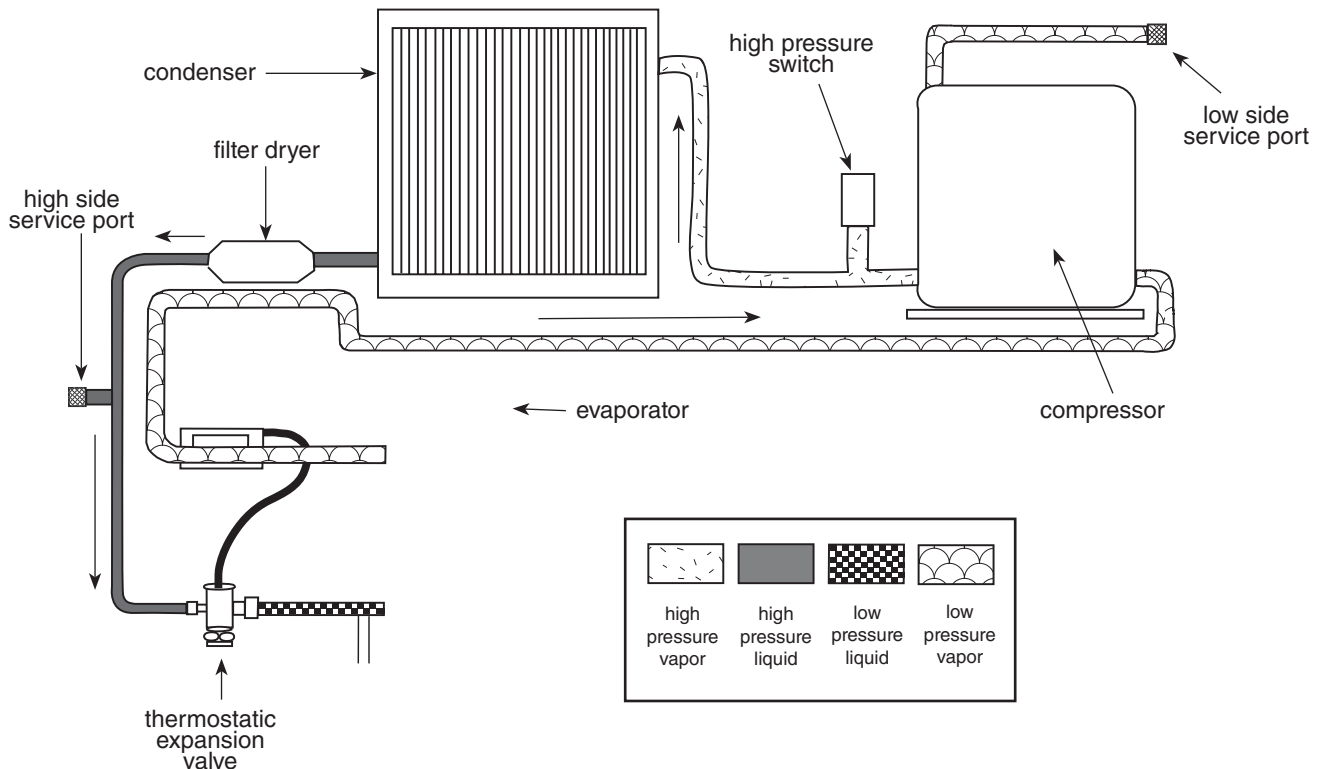

Refrigeration pressure data

Air-cooled icemaker capacity/24 hrs.

Ambient Air Temperature °F/°C

Inlet Water Temperature °F/°C	F	60	70	80	90	100	
	C	16	21	27	32	38	
	50	468	417	366	317	268	lbs.
	10	212	189	166	144	122	kg.
	60	450	402	354	298	243	lbs.
	16	204	182	161	135	110	kg.
	70	432	387	342	280	217	lbs.
	21	196	176	155	127	98	kg.
	80	410	369	328	271	214	lbs.
	27	186	175	149	123	97	kg.
	90	387	351	314	262	210	lbs.
	32	176	159	142	119	95	kg.

Air-cooled Icemaker Refrigeration Pressure

Discharge Pressure/Suction Pressure

Ambient air temperature C					Ambient air temperature F						
Icemaker inlet water temperature C	C	16	27	38		Icemaker inlet water temperature F	F	60	80	100	
	10	12/1.6	16.9/2.1	16.3/2.5	bar		50	174/23	245/31	237/37	psi
	21	12/1.6	16.8/2.1	22.5/2.6	bar		70	174/23	244/30	326/38	psi
	32	13.1/1.7	18.3/2.2	23.9/2.8	bar		90	190/25	265/32	347/40	psi

Table 2 – Compressor data

Compressor current draw

Air-cooled

Ambient air temp.	15.6°C/60°F	21.1°C/70°F	26.7°C/80°F	32.2°C/90°F	37.8°C/100°F
	3.2A	3.3A	3.4A	3.5A	3.6A

Locked rotor amps 26.3

Table 3 – Gearmotor data

Gearmotor current 1.3A (nominal)

Locked rotor amps 6.8 amps

Refrigeration system

Important: All service on refrigeration system must be performed in accordance with all federal, state and local laws that pertain to the use of refrigerants. It is the responsibility of the technician to ensure that these requirements are met.

Icemaker charge specifications

Model	Charge	Refrigerant type
C/E12CI400A, C/E12HI400A (air-cooled)	540g (19 oz)	R404A



Recharging of unit at other than factory specifications will void icemaker warranty.

Refrigerant replacement requirements

1. Non-contaminated refrigerant removed from any Follett refrigeration system can be recycled and returned to the same system after completing repairs. Recycled refrigerant must be stored in a clean, approved storage container. If additional refrigerant is required, virgin or reclaimed refrigerant that meets ARI standard 700-88 must be used.
2. In the event of system contamination (for example, a compressor burn out, refrigerant leak, presence of non-condensibles or moisture), the system must be repaired, evacuated and recharged using virgin or reclaimed refrigerant that meets ARI standard 700-88.
3. Follett Corporation does not approve of recovered refrigerants. Improper refrigeration servicing procedures will void the factory warranty.

Evacuation

Evacuate the system to a level of 500 microns. When the 500 micron level is reached, close valves and both manifold and shut down the vacuum pump. Allow the system to sit for approximately 20 minutes. During this period the system pressure should not rise. If the system pressure rises and stabilizes there is moisture in the system and further evacuation is needed. If the pressure continues to rise check the system for leaks.

Ambients	Minimum	Maximum
Air temperature ¹	10°C/50°F	37.8°C/100°F
Water temperature ²	4.4°C/40°F	32.2°C/90°F

¹Ambient air temperature is measured at the air-cooled condenser coil inlet.

²Ambient water temperature is measured in the icemaker float reservoir.

Ice capacity test

Icemaker production capacity can only be determined by weighing ice produced in a specific time period.

1. Remove top panel and hopper lid of unit.
2. Weigh and record weight of container used to catch ice.
3. Run icemaker for at least 15 minutes.
4. Catch ice for 15 or 20 minutes.
5. Weigh harvested ice and record total weight.
6. Subtract weight of container from total weight.
7. Convert fractions of pounds to decimal equivalents (Ex. 6 lbs 8 oz = 6.5 lbs).
8. Calculate production using following formula:

$\frac{1440 \text{ min.} \times \text{wt. of ice produced}}{\text{Total test time in minutes}} = \text{Production capacity/24 hr. period}$
--

9. Calculated amount per 24 hours should be checked against rated capacity for same ambient and water temperatures in Ice Production Table (see page 22).

Dispenser troubleshooting



Disconnect power to unit before putting hands or arms in storage area or attempting any repair or service to equipment.

Before calling for service:

- Check that no ice is in the dispenser bin area
- Check that all switches and circuit breakers are on
- Check that congealed ice is not causing a jam
- Check that all drains are clear

Troubleshooting the dispenser – lever models

Problem	Indicators	Corrective action
Does not dispense ice.	<ol style="list-style-type: none">1. Power switch off or faulty.2. Faulty dispense switch.3. Wheel motor malfunction.4. Storage hopper cover (inside dispenser cabinet) off or ajar.	<ol style="list-style-type: none">1. Check switch – turn on or replace if faulty.2. Replace switch.3. Check motor and capacitor and replace as required.4. Secure cover.
Dispense wheel rotates continuously.	<ol style="list-style-type: none">1. Dispense switch contacts burned shut.	<ol style="list-style-type: none">1. Replace dispense switch.
Icemaker runs continuously.	<ol style="list-style-type: none">1. Faulty or incorrectly positioned bin stat.	<ol style="list-style-type: none">1. Check for proper positing – if stat does not open when ice is places on capillary tube, replace stat.
Does not dispense water.	<ol style="list-style-type: none">1. Faulty water solenoid valve.2. Faulty dispense switch.3. Power switch off or faulty.	<ol style="list-style-type: none">1. Replace water solenoid valve.2. Replace dispense switch.3. Check switch – turn on or replace if faulty.

Troubleshooting the dispenser – SensorSAFE models

Problem: Does not dispense ice and/or water

Action	LED status			Solution
	PWR	CLN	ICE/WTR	
Check LEDs on control board.	OFF	OFF	OFF	Check circuit breakers and power switch. Restore power or replace defective switch.
	ON	ON	OFF	Press clean switch on lower left side of electrical enclosure to return board to normal operation.
Place cup under drop zone.	ON	OFF	OFF	Troubleshoot appropriate lens/sensor and replace if required (see Lens/Sensor Troubleshooting).
	ON	OFF	ON	Verify power on appropriate output terminal (WTR or WM) on control board and replace board if required. If board tests okay, troubleshoot appropriate dispenser component.

Troubleshooting the dispenser – SensorSAFE models

Problem: Dispenses ice and/or water continuously

Action	LED status			Solution
	PWR	CLN	ICE/WTR	
Check LEDs on control board.	ON	OFF	ON	Troubleshoot appropriate lens/sensor and replace if required (see Lens/Sensor Troubleshooting).
	ON	OFF	OFF	If there is power on any output terminal (WTR or WM) on control board, replace board.

Board guide

LEDs, when illuminated, indicate the following: PWR (board power), CLN (cleaning, no dispensing cycle), ICE (ice dispensing activated), WTR (water dispensing activated).

Terminals: LI (incoming power, hot), L2 (neutral terminals), WTR (power terminal for water solenoid), WM (power terminal for wheelmotor), CLN (terminals for clean cycle switch).

Note: SOL terminal not used in 12 series dispensers.

Lens/sensor troubleshooting

1. Turn dispenser power switch off and remove slash panel.
2. Disconnect wires from WTR and WM terminals on board.
3. Gently remove sensor/mounting block from splash panel.
4. Inspect lens and sensor, clean if necessary.
5. Restore dispenser power and test sensor by passing hand in front of sensor.
6. If LED on board turns on, sensor is operational. Re-assemble dispenser.
7. If LED does not come on switch sensor leads on board and retest.
8. If opposite Led comes on – replace defective board.
9. If opposite Led does not come on – replace defective sensor.

Icemaker troubleshooting chart

- Flashing water LED at any time indicates that water signal to board had been lost for more than one second.
- Ten-second delay: There is a 10 second delay in reaction to loss of water (WTR) or bin (B-E) signals. If signals are not lost for more than 10 seconds, no reaction will occur.

Problem	Indicators/possible cause	Corrective action
1. Icemaker will not run. System status: compressor, gearmotor, and fan motor inoperative.	<ol style="list-style-type: none"> 1. No power to unit. 2. Open bin level control. 3. Water OK LED (WTR) not on. 4. 20M or 2ND LED is on indicating that first or second torque error has occurred. 5. Gear motor locked up (immediate torque error indicated by LEDs when board is reset). 6. Open coil on gearmotor start relay causing an immediate torque error. 	<ol style="list-style-type: none"> 1. Check that unit is plugged in, circuit breakers are on. 2. Adjust or replace ice level control. 3. Check reservoir for water, restore water to unit. 4. See #6 below. 5. Repair or replace gear motor. 6. Replace gearmotor start relay.
2. Compressor will not run. System status: gearmotor and fan motor run.	<ol style="list-style-type: none"> 1. Condenser coil plugged causing open overload or high pressure cut-out. 2. Defective starting capacitor. 3. Defective starting relay. 4. Open motor winding. 5. No power output from compressor output terminal on control board. 	<ol style="list-style-type: none"> 1. Clean condenser coil and replace overload if necessary. 2. Replace start capacitor. 3. Replace relay. 4. Ohm out windings and replace compressor if necessary. 5. Check terminal connection and replace control board if necessary.
3. Unit cycles intermittently. System status: compressor, gear motor, and fan motor cycle.	<ol style="list-style-type: none"> 1. Float reservoir running dry, sensing probe signalling for system to shut down. 	<ol style="list-style-type: none"> 1. Check water supply to float and float operation. PC board will have flashing WTR LED.
4. Low ice production. Poor quality ice.	<ol style="list-style-type: none"> 1. Dirty condenser coil. 2. Restricted air flow to condenser coil. 3. Mineral coated evaporator. 4. Improper exhaust air provisions. 5. Faulty expansion valve. 6. Low refrigerant charge. 7. Superheat incorrect. 8. Inefficient compressor. 	<ol style="list-style-type: none"> 1. Clean condenser. 2. Remove obstruction. 3. Clean evaporator. 4. Provide proper exhaust air provisions per Follett installation manual. 5. Replace expansion valve. 6. Check for leaks; repair, evacuate, and weigh in correct charge. 7. Check that TEV sensing bulb is securely clamped in place and not damaged; check that insulated bulb cover is in place. 8. Replace compressor.
5. Water leaks from bottom of evaporator.	<ol style="list-style-type: none"> 1. O ring seal broken. 	<ol style="list-style-type: none"> 1. Replace O ring.


Icemaker troubleshooting chart

Problem	Indicators/possible cause	Corrective action
6. Icemaker runs for short period of time and shuts down on torque error. System status: 20M or 2nd LED are lit.	<ol style="list-style-type: none"> 1. Kink in ice transport tube. 2. Bin level control remains in closed position. 3. Ice transport tube ruptured internally. 4. Worn evaporator bearings. 5. Faulty gearmotor start relay. Icemaker torques out within 5 seconds of start-up. 6. Torque out occurs when storage bin fills to capacity. 	<ol style="list-style-type: none"> 1. Eliminate kink and check that tube routing complies with Follett icemaker installation manual. 2. Adjust or replace control. 3. Replace complete run of ice transport tube. 4. Inspect bearings for roughness or binding and replace if necessary. 5. Replace gearmotor start relay. 6. Ensure that ice contacts bin thermostat before backing ice up in transport tube. Refer to dispenser manual for proper thermostat and ice tube mounting.
7. Evaporator is iced up on the outside. No ice production. System status: compressor, gearmotor and fan motor running.	<ol style="list-style-type: none"> 1. Gearmotor running but no output rotation. 2. Float reservoir empty. 3. Air bubble in water supply line. Water in reservoir but not in evaporator. 	<ol style="list-style-type: none"> 1. Check for broken gearmotor output shaft or damaged gearbox. 2. Check for defective water sensor (water OK (WTR) LED remains on even when float empty or probe removed from water). 3. Purge air from line.
8. Compressor cycles intermittently. System status: gearmotor and fan motor run.	<ol style="list-style-type: none"> 1. High pressure cut-out open due to high head pressure. 2. Clogged or dirty condenser coil. 3. Improper ventilation. 4. Defective compressor. 	<ol style="list-style-type: none"> 1. Check discharge pressure and adjust water regulator valve. 2. Clean condenser coil. 3. Provide inlet and exhaust air provisions per Follett icemaker installation manual. 4. Replace compressor.
9. Unit runs but not making ice. System status: compressor, gearmotor & fan motor running.	<ol style="list-style-type: none"> 1. Clogged or dirty condenser coil. 2. Compressor not pumping. 3. Low refrigerant charge. 	<ol style="list-style-type: none"> 1. Clean condenser coil. 2. Replace compressor. 3. Check for leaks; repair, evacuate, and weigh in correct charge.
10. Compressor and fan motor will not run. Gearmotor runs.	<ol style="list-style-type: none"> 1. Compressor switch in OFF position. 2. No output on compressor and fan motor terminals on control board. 3. Failed fan motor causes high pressure cut-out to open. 	<ol style="list-style-type: none"> 1. Turn compressor switch on. 2. Replace control board. 3. Replace fan motor.
11. Intermittent noises from evaporator.	<ol style="list-style-type: none"> 1. Mineral build-up on evaporator surface. 	<ol style="list-style-type: none"> 1. Clean evaporator with liquid IM cleaner.

Disassembly and replacement instructions


Dispense chute removal

1. Remove top cover (see page 30).
2. Remove stainless front cover (see page 30)
3. Slide plastic dispense chute cover up and out to remove.
4. Remove four (4) push fasteners holding dispense tube in place and remove tube.

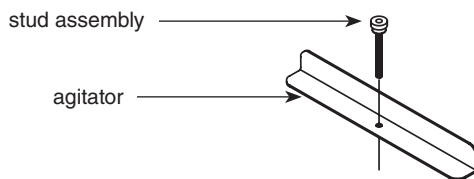

Dispense wheel and drive bar removal


1. Remove all ice from storage area of dispenser.
2. Remove center thumbscrew, locking plate, two wingnuts and backing plate from front of storage hopper (see drawing at right).
3. Remove stud assembly, agitator, spacer, baffle, wheel and drive bar in this sequence.

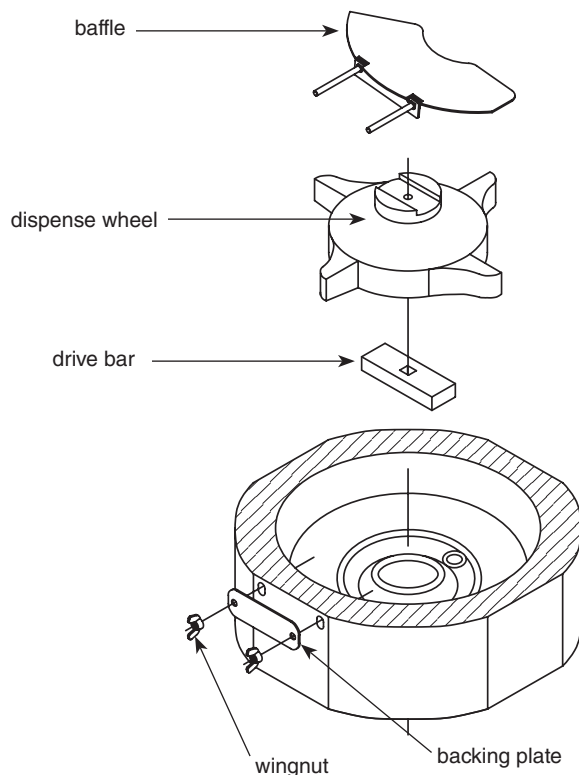

Wheelmotor removal

1. Remove dispense wheel and drive bar (see above).
2. Remove four (4) hopper/support plate mounting screws and washers (Fig. 11.1).
3. Move hopper assembly 1/2" (13mm) to left.
4. Remove four (4) dispenser motor bracket mounting screws and washers (Fig. 11.2).
5. **Short shaft motors only:** loosen **only** two (2) lower screws on drive coupling and remove from motor shaft (Fig. 11.3).
6. Remove four (4) screws holding motor to mounting bracket.


Fig. 11

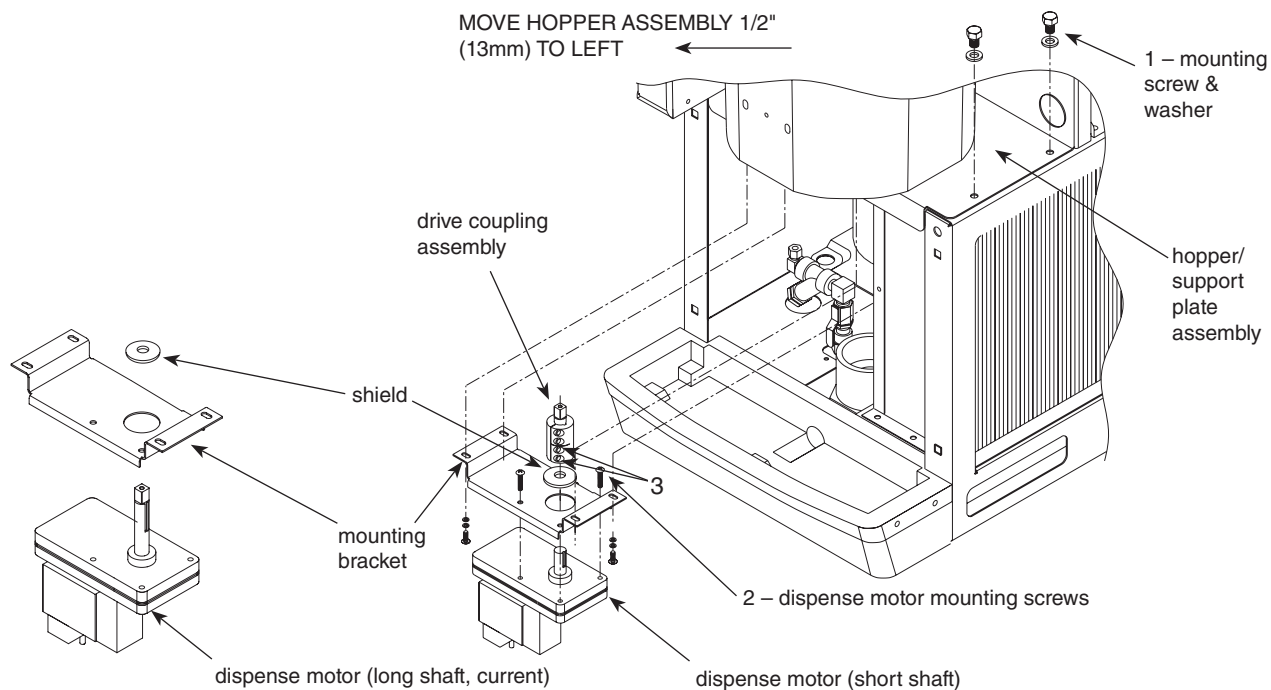

Evaporator disassembly


Note: The upper bearing, lower bearing and auger assemblies must be replaced as assemblies. The bottom and top bearing assemblies cannot be field assembled to factory specifications.

1. Disconnect power to icemaker.
2. Shut off water to icemaker.
3. Drain evaporator and float tank.
4. Disconnect plastic tubing from evaporator water inlet, drain pan stub, compression nozzle tubing and reservoir overflow tubing from secured clip.
5. Disconnect ice transport tube from compression nozzle.
6. Remove nut and upper vee band coupling from top of evaporator
7. Lift top bearing assembly straight up with a slight rotating motion and remove.
8. Remove ice compression loop located at top of auger.
9. Lift auger straight up and out of evaporator.
10. Remove nut and lower vee band coupling from bottom of evaporator.
11. Lift evaporator to clear bottom bearing assembly.
12. Loosen hex head bolt in side of mounting base with 8mm (5/16") wrench and lift lower bearing assembly.
13. Remove condensate shield.
14. Remove 4 Allen head machine screws holding mounting base to gearbox.
15. If replacing evaporator, remove compression nozzle from evaporator port.

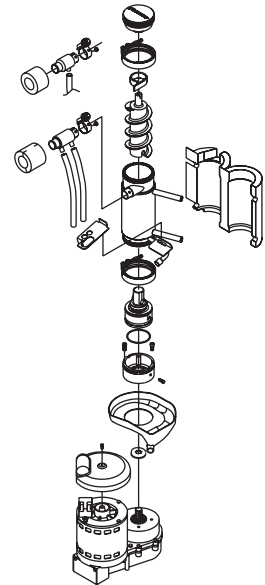

Evaporator reassembly


1. Clean gearmotor boss, output shaft and shaft well.
2. Install drain pan and evaporator mounting base.
3. Fill gear motor shaft well with food grade grease.
4. Install condensate shield and seat against gear motor boss.
5. Install bearing O ring in groove in evaporator mounting base.
6. Lower bottom bearing assembly into evaporator mounting base.
7. While maintaining a slight downward pressure on bottom bearing assembly, tighten hex head bolt with a 8mm (5/16") wrench.
8. Position evaporator over lower bearing assembly and align grooves with pins in bearing assembly.
- 9. Install vee band clamp and nut to 8.05mm/kg (70 in/lb).**
10. Place auger in center of evaporator and rotate to mate with drive pin.
11. Install ice compression loop, orienting loop.
12. Install upper bearing and seal assembly, rotating bearing to slip pin into auger slot.
- 13. Install upper vee band clamp and nut to 8.05mm/kg (70 in/lb).**
14. If evaporator was replaced, reinstall compression nozzle on new.

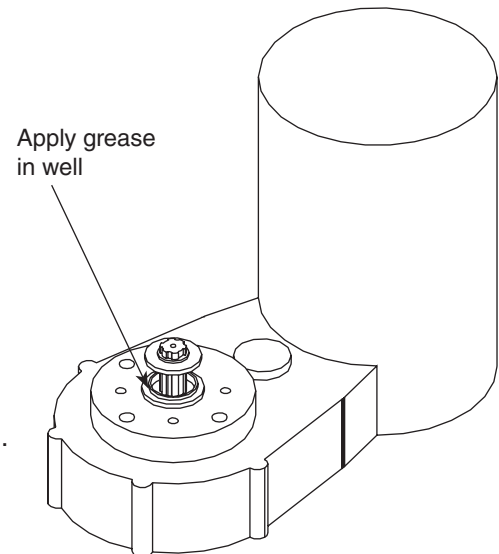


Gearmotor replacement

1. Disassemble evaporator as described above.
2. Disconnect the wire connectors.
3. Remove four screws holding gear motor mounting plate to base of icemaker and lift gearbox and motor clear of icemaker.
4. Remove machine screws holding mounting plate to motor.
5. Install new motor in reverse order.


Panel removal

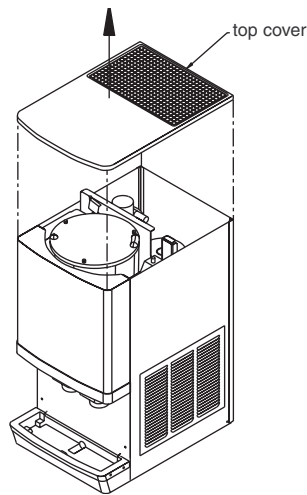


Top cover: Lift cover up and off Velcro strips.

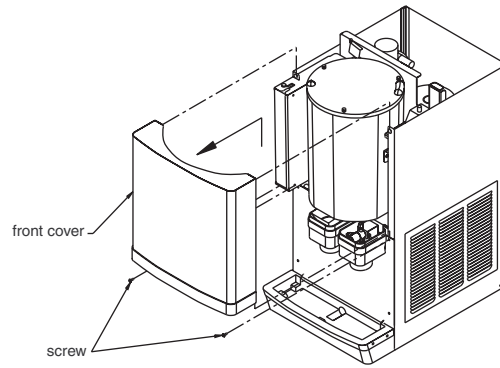

Front cover: Remove 2 screws. Lift cover up and forward to unhook from keyhole slots and clear tabs on bottom of cover.

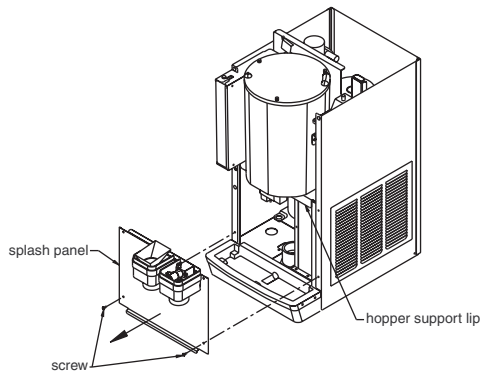


Splash panel: Remove 2 screws. Pull out bottom of panel to allow top to slide out from under hopper support lip.

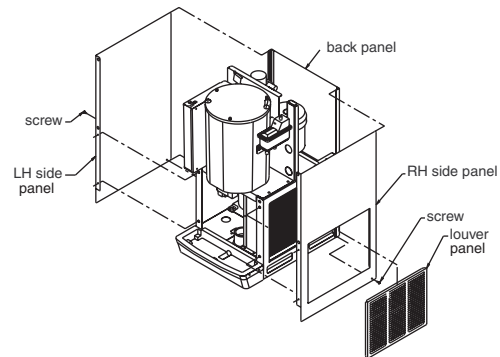


Side panels: Remove screw located on lower rear side. Pull side panel toward front of unit and out of back panel. Note: Before removing right hand side, remove side louver panel by lifting up and pulling forward on panel.


Fan removal

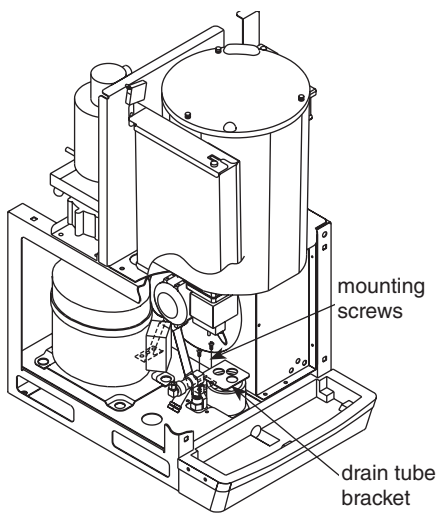

(a) Remove 4 fan mounting screws and 3 drain tubes from bracket.

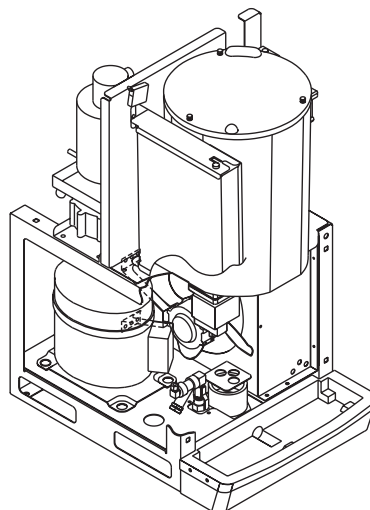


(b) Rotate fan mounting bracket toward back of unit and pull fan assembly toward front of unit.

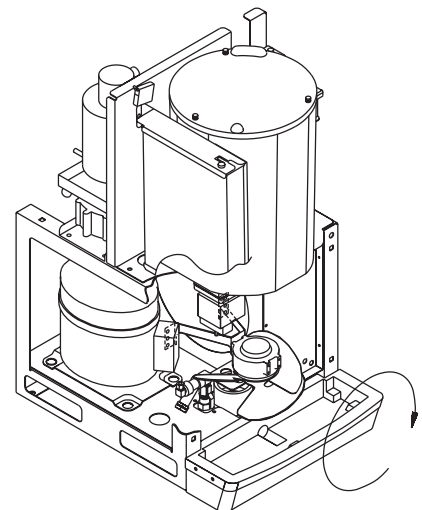

(c) As fan assembly is being pulled toward front, rotate assembly clockwise as shown above.

Thermostat and ice transport tube replacement

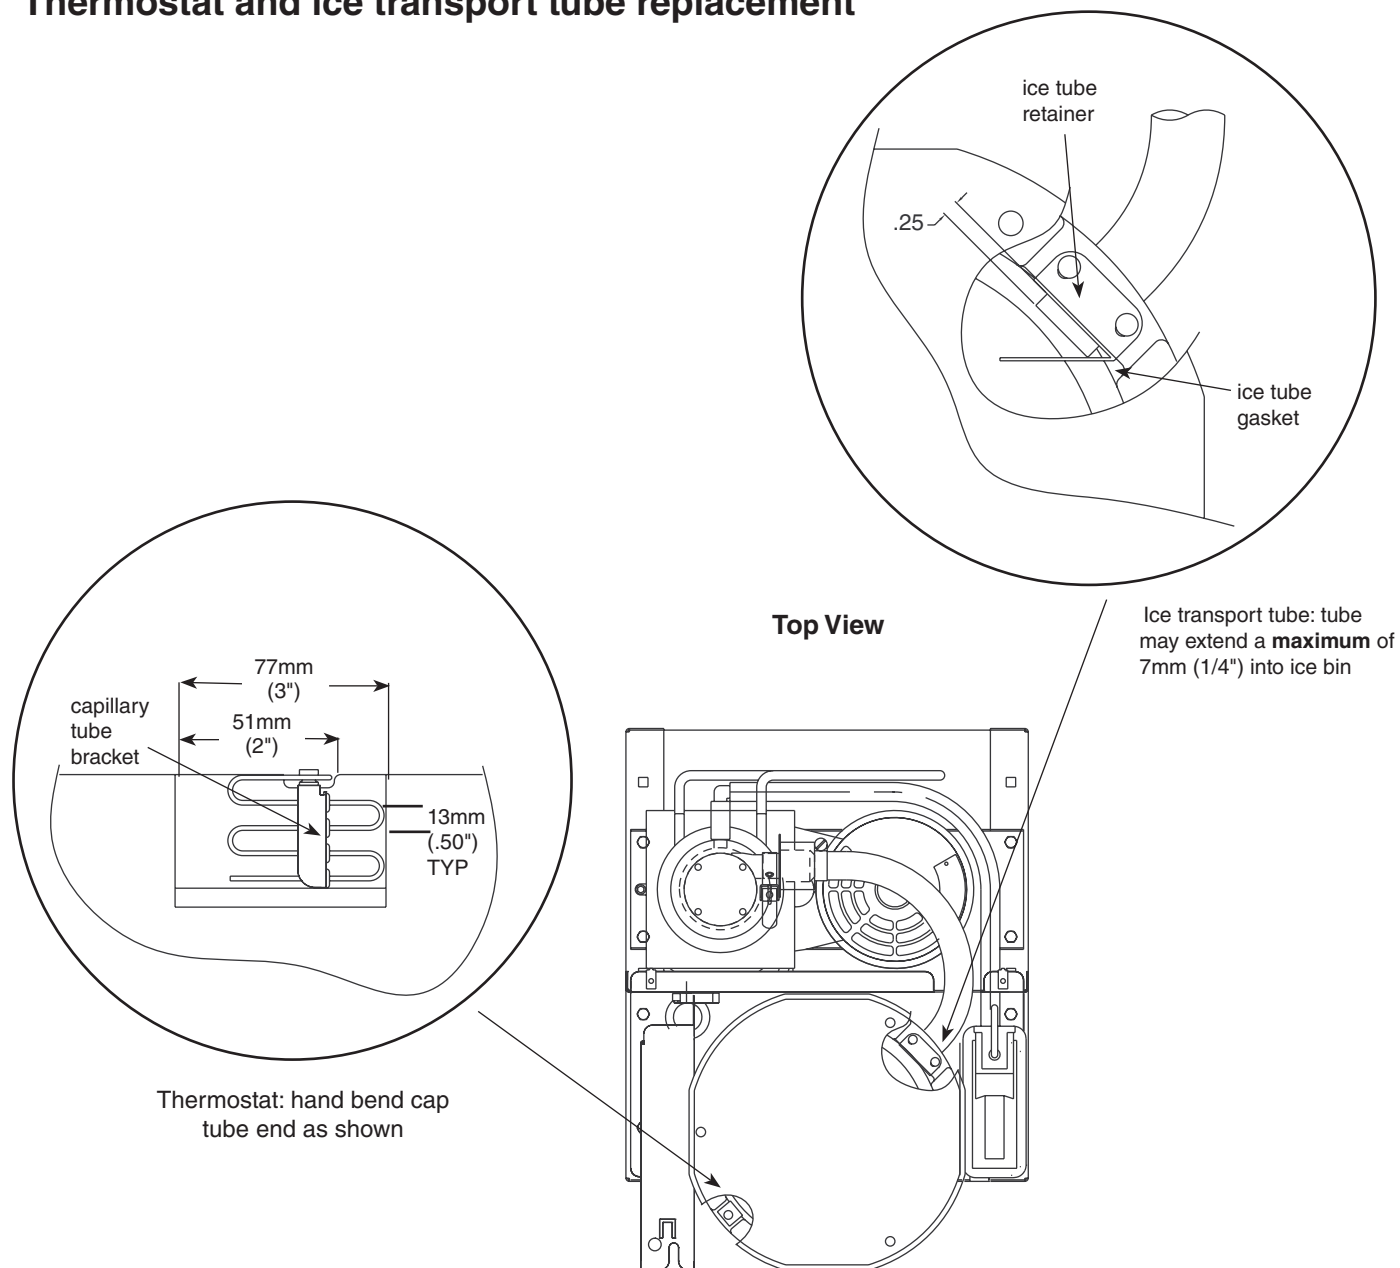


Ice transport tube replacement

1. Push tube onto evaporator port.
2. Position clamp behind lip on evaporator port and tighten clamp.



Parts

Dispenser exterior

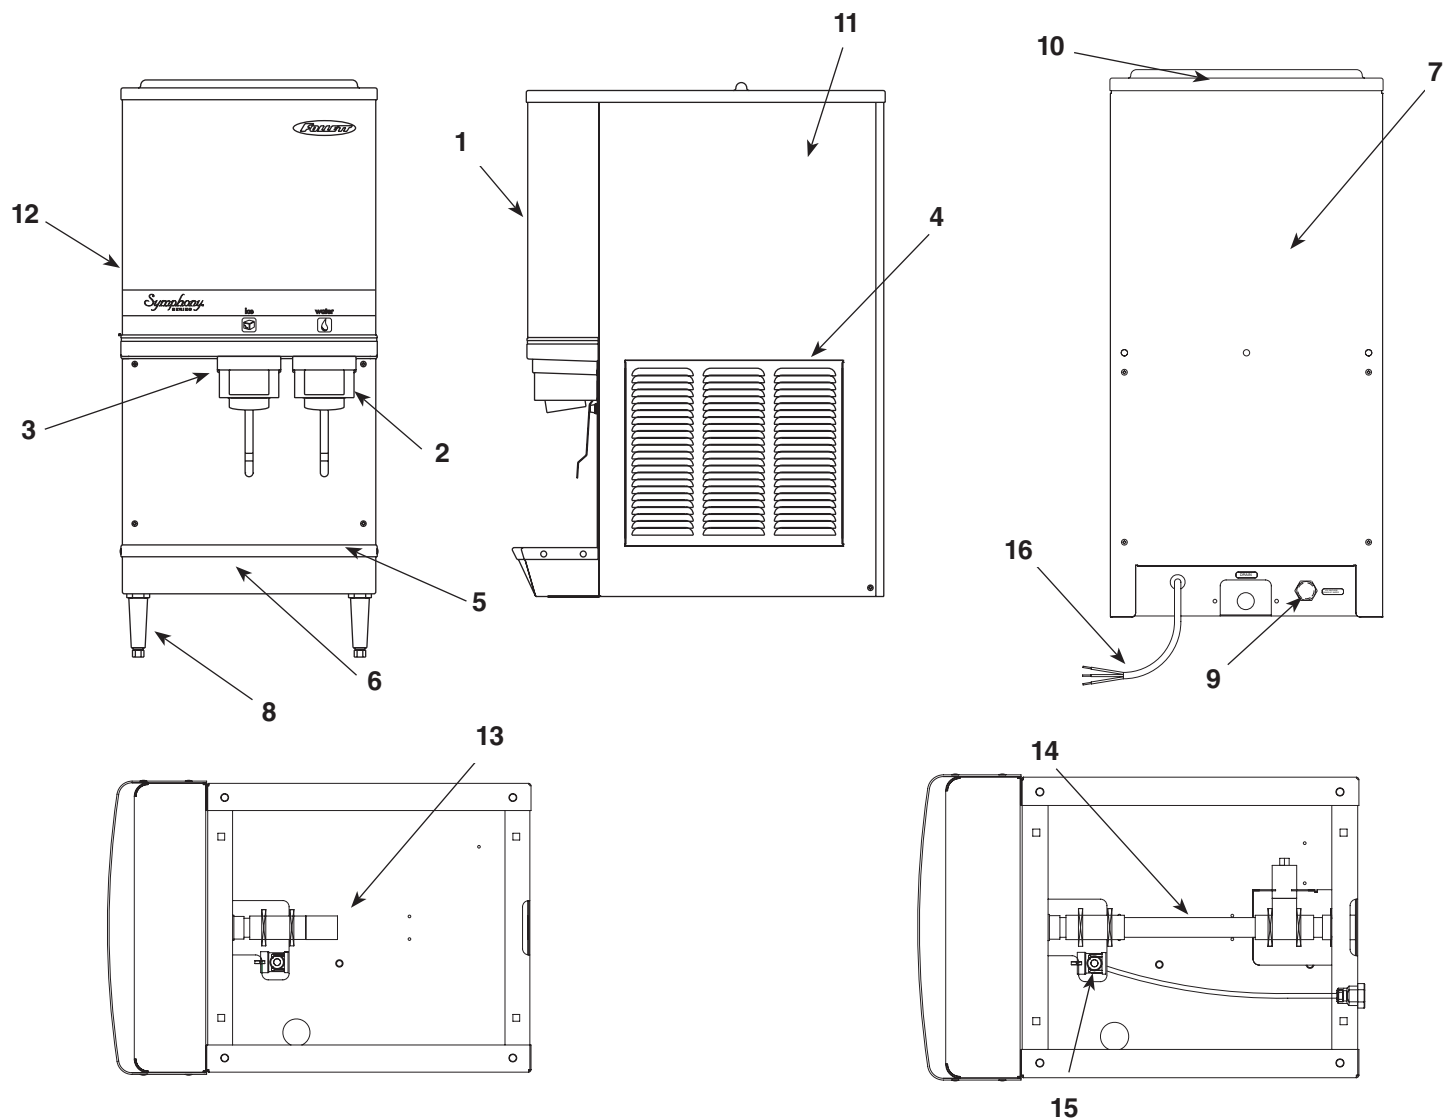


Part #	Description	Reference #
502932	Cover, front	1
502819	Cover, dispense assembly	2
502400	Cover, dispense assembly, ice	3
502402	Louver, intake	4
502412	Grille, drain pan	Not shown
502883	Drain pan, plastic	5
502410	Drain pan assembly (includes base, pan and grill)	6
502394	Panel, rear	7
502399	Leg kit, 102mm (4"), adjustable – set of 4	8
502924	Union, bulkhead, 10mm (3/8")	9
502397	Lid, top panel, plastic	10
502396	Panel, right side	11
502395	Panel, left side	12
502422	Drain tube assembly, wall mount w/drain pan	13
502391	Drain tube assembly, countertop	14
502514	Drain tube assembly, wall mount w/o drain pan	Not shown
502873	Bracket, wall mount, 407mm (16")	Not shown
502925	Elbow, 10mm (3/8")	15
502940	Power cord	16

Wheelmotor and drive system

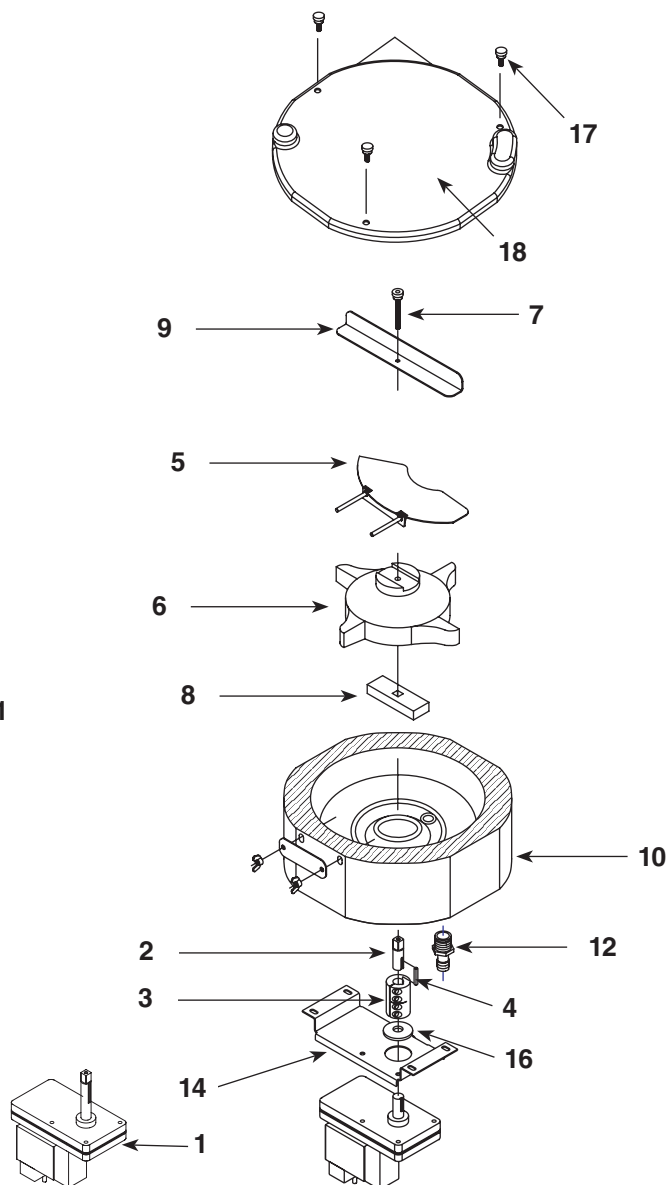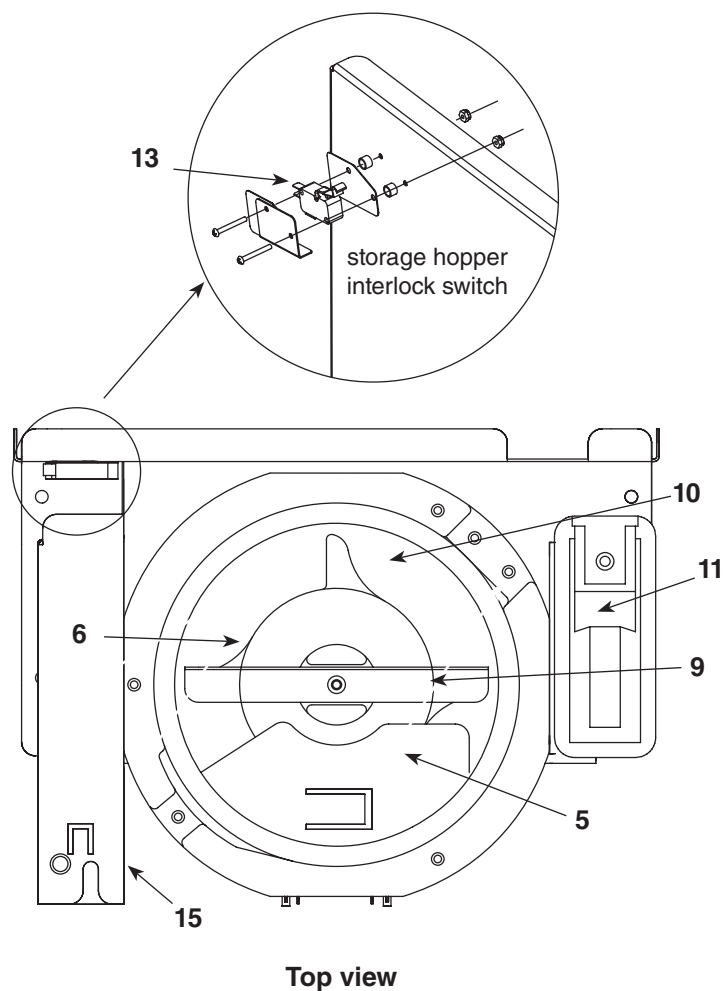


Part #	Description	Reference #
502933	Motor, wheel – 220V 60 Hz/230V 50Hz (includes 502537)	1
502384	Drive shaft extension	2
502385	Coupling (includes key)	3
501273	Key, 1/8" sq x 1-1/4" lg	4
502414	Baffle, ice (securing hardware included)	5
502387	Wheel, agitator	6
502390	Rod, threaded (includes knurled nut)	7
502388	Drive bar	8
502386	Agitator, rotating	9
502406	Bracket, capillary tube	See page 28
502404	Retainer, ice tube (2" high)	See page 28
00152017	Retainer, ice tube (2 1/4" high)	See page 28
502405	Gasket, ice tube	See page 28
502413	Assembly, hopper (includes drain fitting)	10
500504	Float valve and reservoir	11
207095	Fitting, hopper drain, 3/4 MPT. 3/4 barb fitting (After SN# B72959)	12
502381	Fitting, hopper drain (includes nut)	Not shown
502416	Switch, interlock	13
502423	Support plate, motor	14
502408	Cover, electrical box	15
502537	Shield, gearmotor	16
207960	Screws, 10-32 x 1/4 (3 needed)	17
00135962	Hopper lid with hopper lid safety switch actuation	18
207809	Hopper lid, dispenser top cover, safety switch actuation (Before SN# B72959)	Not shown

Dispense chute and splash panel — lever model

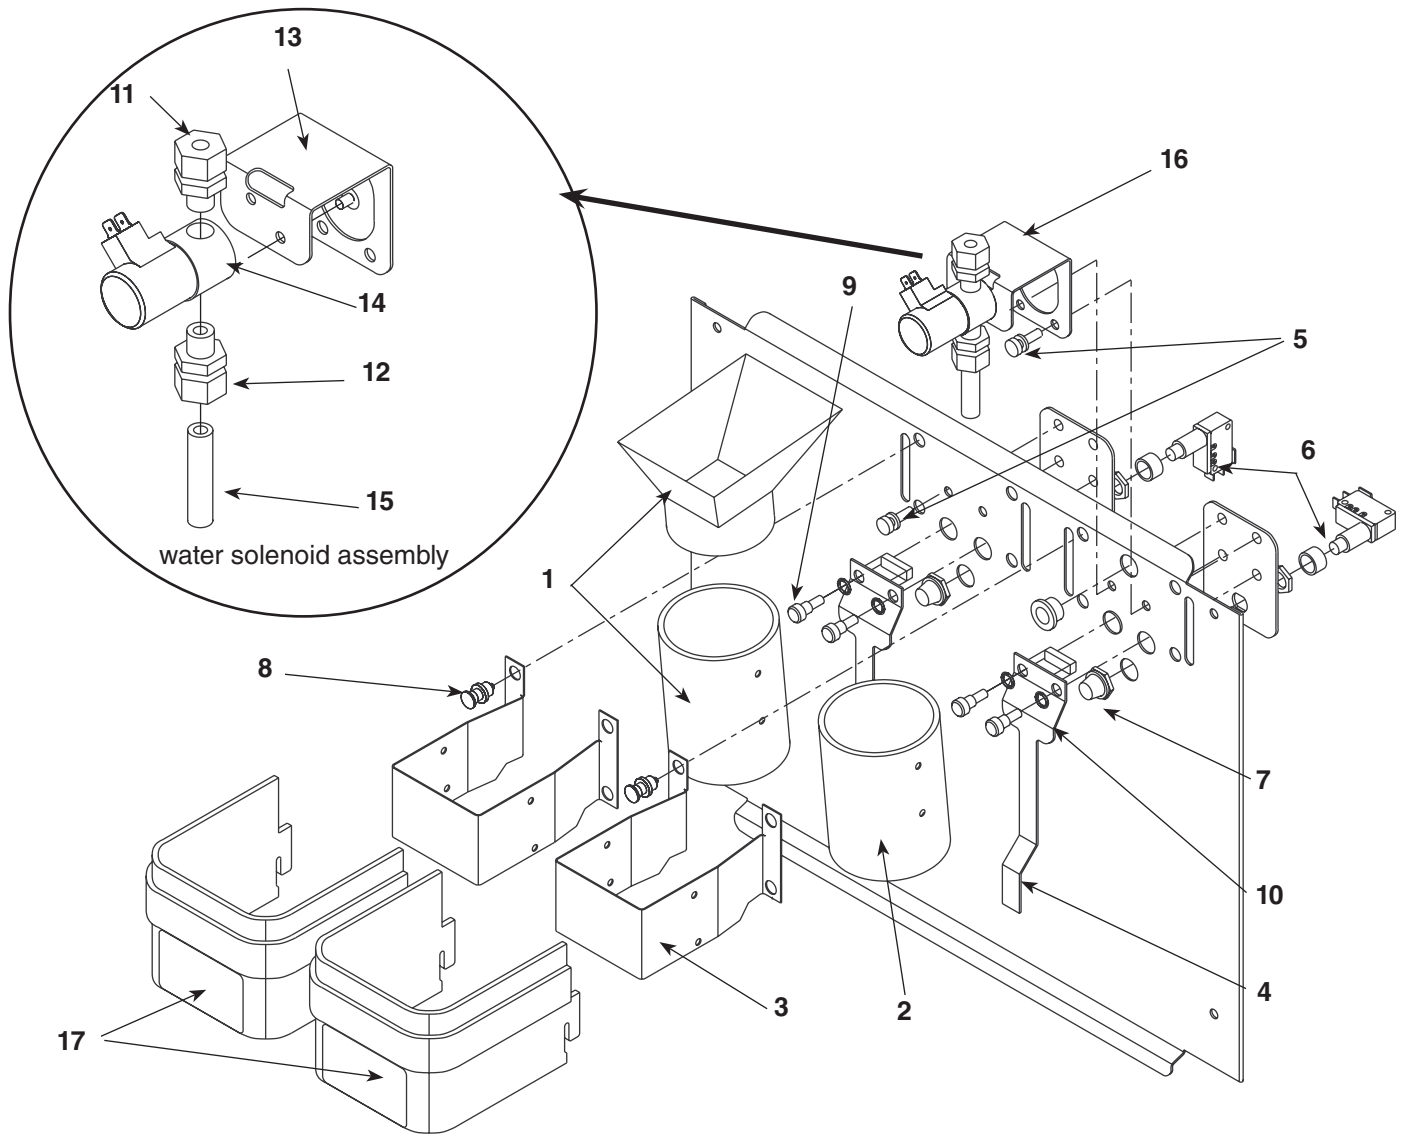

Part #	Description	Reference #
502513	Chute assembly, ice	1
502249	Chute, water	2
502247	Bracket, dispense chute (includes four (4) 502057 fasteners)	3
502417	Lever	4
501100	Thumbscrew	5
502409	Switch, dispense, water/ice (includes nut, boot and spacer)	6
502418	Boot, dispense switch button (mounts over the dispense button)	7
502057	Fastener, dispense chute assembly	8
501250	Screws, dispense lever	9
502427	O ring	10
502561	Fitting, 7mm (1/4") tube	11
502562	Fitting, 10mm (3/8") tube	12
502419	Support bracket, solenoid	13
502926	Valve, solenoid water – 220V 60Hz/230V 50Hz	14
502420	Tube, water solenoid	15
502934	Solenoid, assembly (includes solenoid, fittings, tube & mounting bracket)	16
502819	Cover, dispense assembly	17
502400	Cover, dispense assembly, ice	18

Dispense chute and splash panel – SensorSAFE model

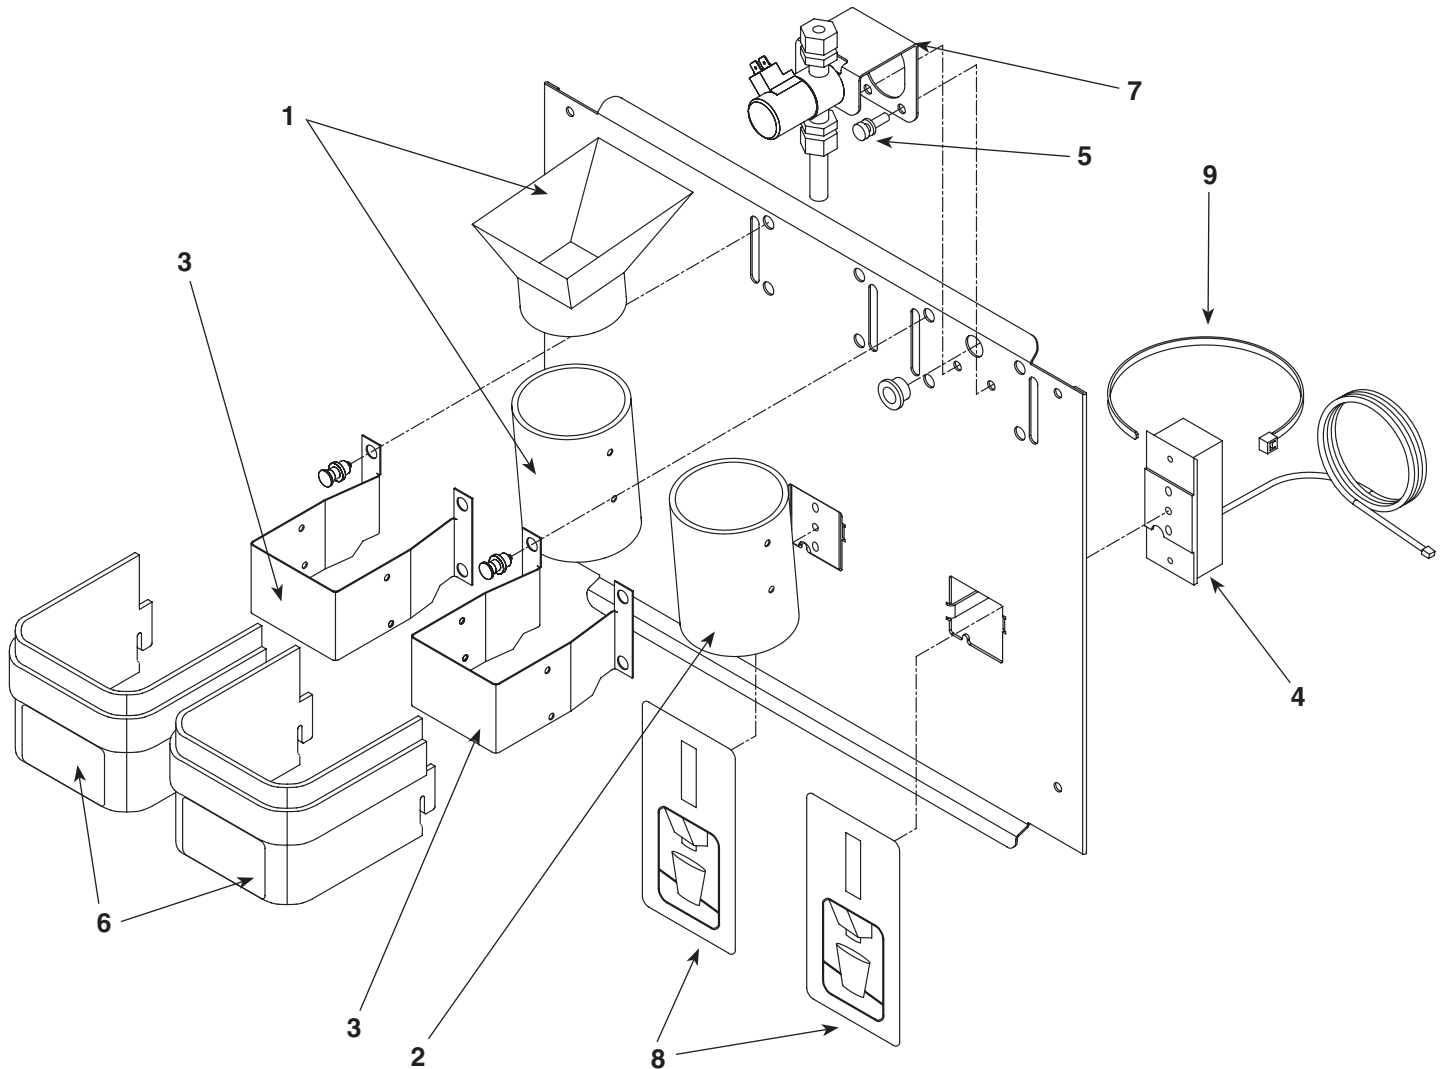

Part #	Description	Reference #
502513	Chute assembly, ice	1
502249	Chute, water	2
502247	Bracket, dispense chute (includes four (4) 502057 fasteners)	3
00122978	Sensor (includes 502690 and 203611)	4
501100	Thumbscrew	5
502819	Cover, dispense chute	6
502934	Solenoid assembly (includes solenoid, fittings, tube & mounting bracket), see page 34 for exploded view	7
502690	Lens, sensor	8
203611	Ty-rap, sensor mounting	9

Icemaker components

Part #	Description	Reference #
501581	Drier	1
501187	Coil, condenser	2
502116	Water sensor	3
500504	Float valve & reservoir	4
502078	Fitting, plastic, float valve (includes sleeve & stem)	Not shown
502221	Compression nozzle, single drain	5
	Evaporator (see page 39 for detailed drawing)	6
501820	Shroud, condenser coil	Not shown
502727	Drain pan, evaporator	7
502726	Valve, expansion, thermal	8
502921	Valve, shut-off, water	9
502832	Gearbox & motor assembly – 220V 60Hz/230V 50Hz	10
502920	Strainer, water	11
500474	Fan blade	12
00149765	Motor, fan – 220V 60Hz/230V 50Hz	13
501188	Bracket, fan motor	14
502897	Overload, compressor – 220V 60Hz	14
502935	Overload, compressor – 230V 50Hz	15
502896	Compressor – 220V 60Hz	16
502834	Compressor – 230V 50Hz	16
501191	Tubing, plastic, food grade, 13mm (1/2") ID (sold by the foot)	17
500623	Tubing, plastic, 16mm (5/8") ID x 21mm (13/16") OD (sold by the foot)	18
502079	Tubing, polypropylene, reservoir supply (sold by the foot)	19
502383	Reservoir mounting bracket	20
502403	Tube, ice transport	21
501176	Insulation, ice tube, 305mm (12") required	22
502806	Bracket, gearmotor mounting	23
502937	Hi-pressure cut-out	25
502922	Clip, water shutoff valve	26
502925	Elbow, water, 10mm (3/8")	Not shown
502923	Tee, 7mm (1/4")	27
502604	Tee, 19mm (3/4")	28
00114199	Adapter, 19mm (3/4") x 16mm (5/8") (Before SN# B72959)	Not shown
00120055	Relay, gearmotor – 220V 60Hz/230V 50Hz	Not shown
203534	Tubing, plastic, 3/4 ID (sold by the foot)	29



Water filter kits and cartridges

Part#	Description
00130299	Follett QC4-FL4S water filter system (includes FL4S primary cartridge and head, coarse pre-filter and head, pressure gauge, flushing valve; assembled and installed on mounting bracket)
00130245	Follett FL4S primary replacement cartridge
00130211	Everpure coarse pre-filter cartridge


Ice machine cleaner

Part#	Description
00132001	SafeCLEAN environmentally-friendly cleaner, carton of 24 x 7 oz packets


Icemaker components

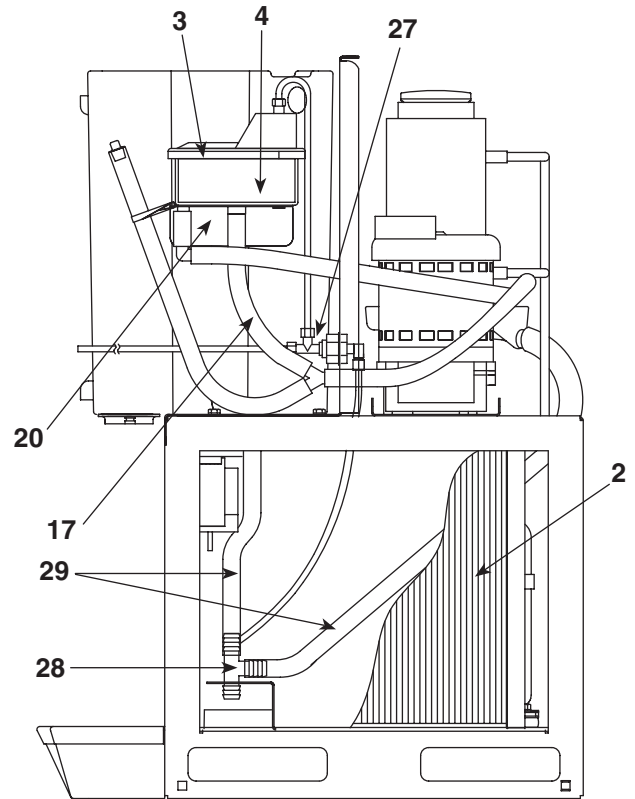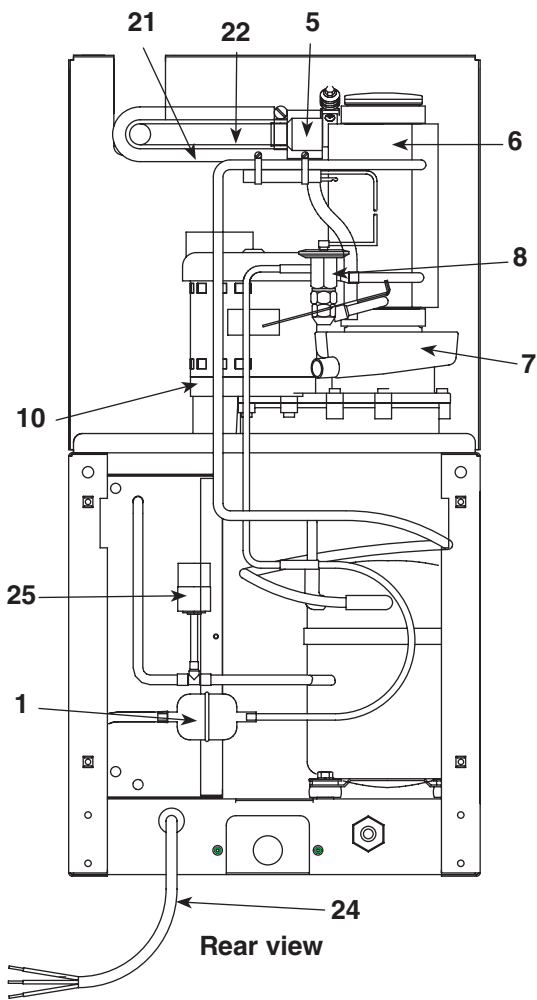

Right side view

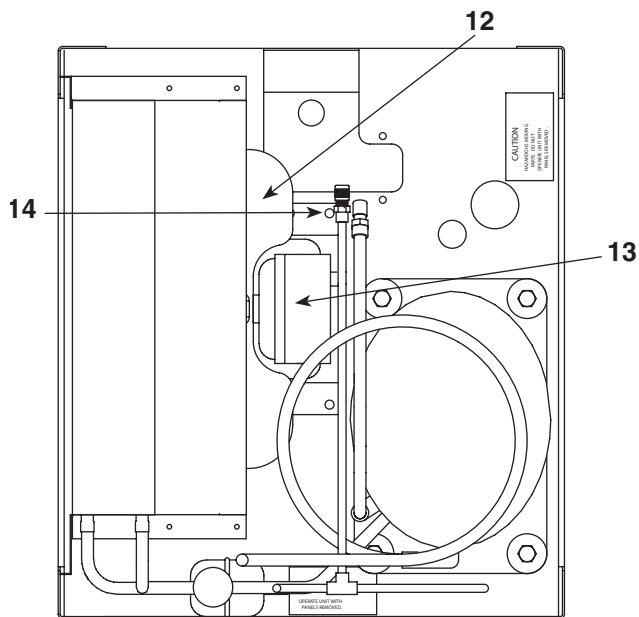


Top view (lower section)

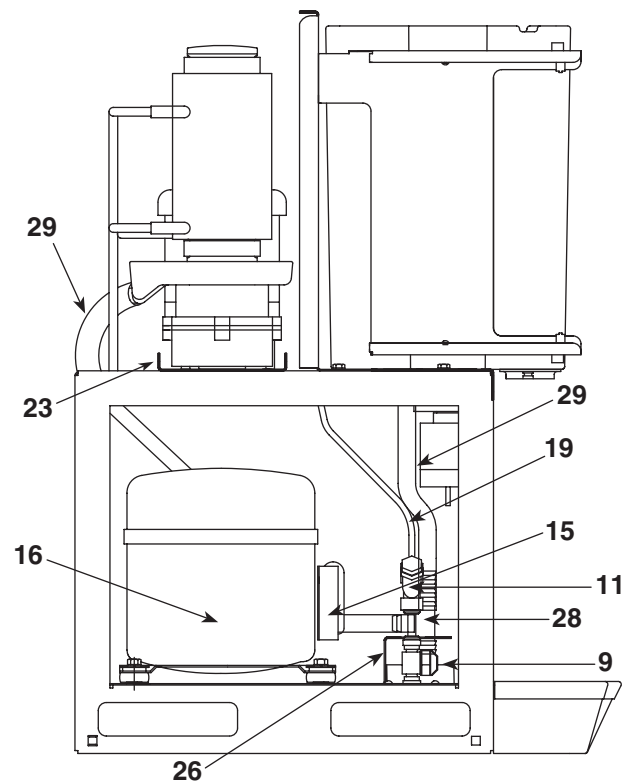

Left side view

Electrical components

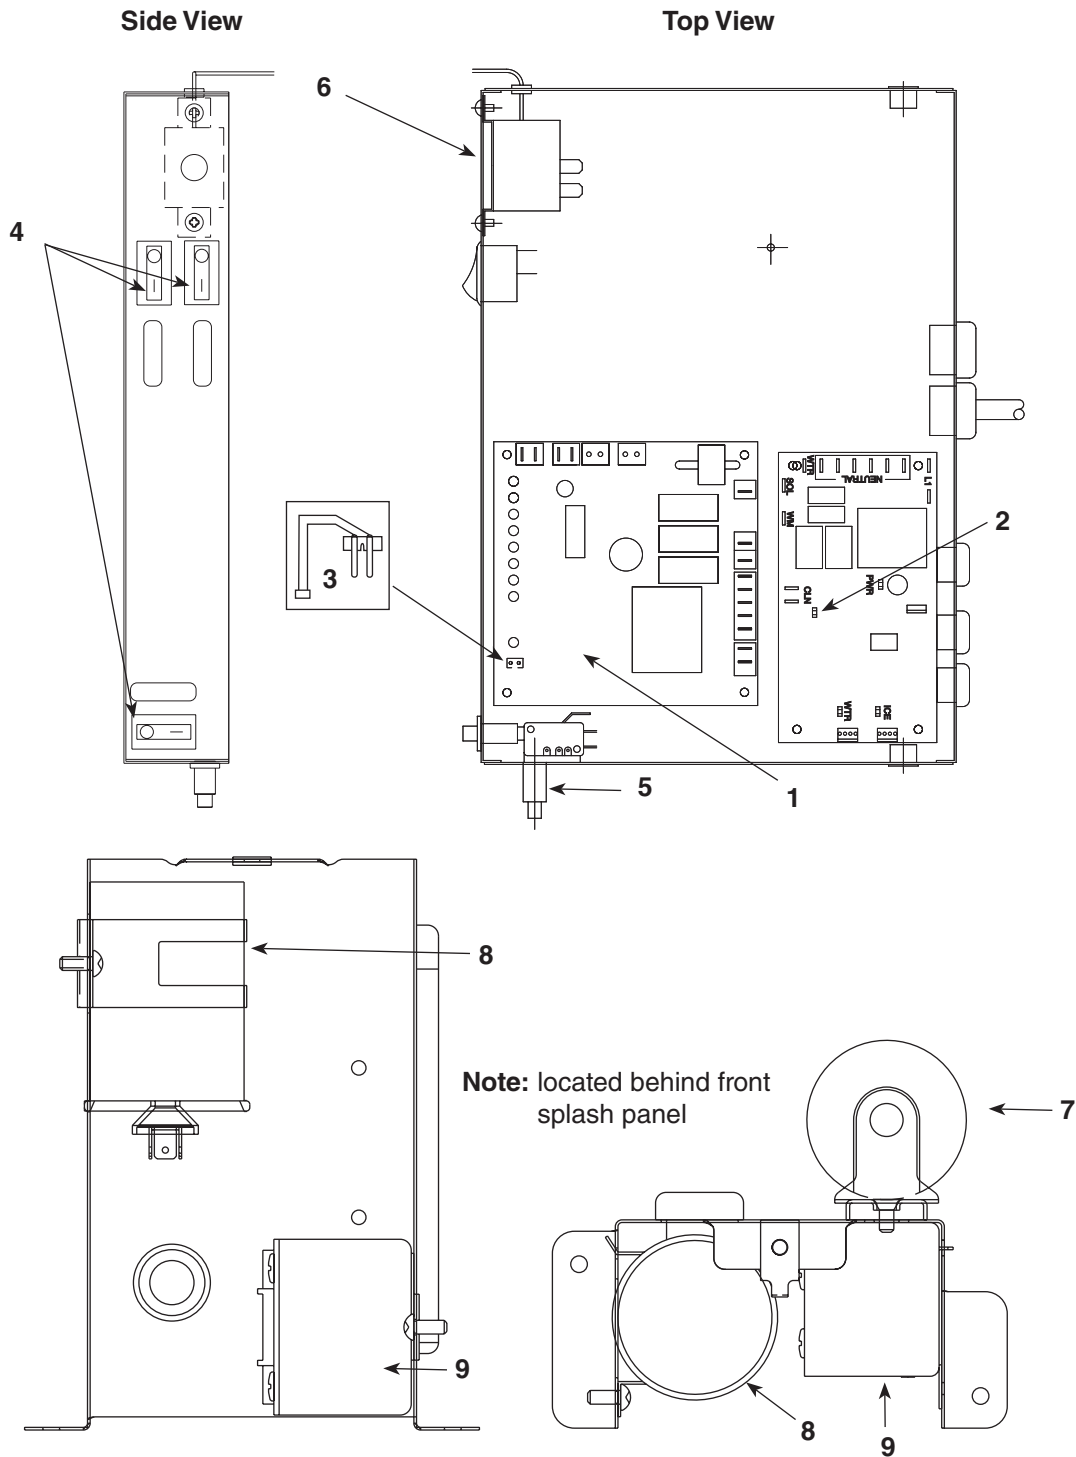

Part #	Description	Reference #
502938	Board, control circuit – 220V 60Hz/230V 50Hz	1
502915	Control board, SensorSAFE models – 220V 60Hz/230V 50Hz	2
502116	Water sensor	3
502209	Switch, on/off, compressor, bin signal	4
502409	Switch, cleaning, SensorSAFE models	5
500514	Bin thermostat	6
502835	Capacitor, start, compressor – 220V 60Hz/230V 50Hz	7
502837	Capacitor, run, compressor – 220V 60Hz/230V 50Hz	8
502899	Relay, start, compressor – 220V 60Hz	9
502836	Relay, start, compressor – 230V 50Hz	9

Evaporator replacement parts

Part #	Description	Reference #
502735	Coupling, vee band, includes nut	1
502736	Bearing assembly, top	2
502110	Loop, ice compression, beveled	3
502737	Auger	4
502725	Evaporator (includes insulation jacket, 502740)	5
500496	O ring, bearing housing	6
502738	Bearing assembly, bottom (includes O rings and condensate shield)	7
501063	O ring, mounting base	8
500744	Shield, condensate	9
501080	Screw, Allen 1/4" 20 x 1/2" (set of 4)	10
502733	Mounting base, evap. (includes 501063)	11
502227	Bolt, mounting base	12
502832	Gearbox & motor assembly – 220V 60Hz/230V 50Hz	13
502729	Mounting base, gearbox	Not shown
502221	Compression nozzle, with single drain	15
502727	Drain pan, evaporator	16
502226	Clamp, compression nozzle and screw	17
500680	Tubing, compression nozzle drain(s) (sold by foot)	18
501111	Grease, Chevron SRI-2, 398ml (14 oz)	Not shown
502739	Bracket, drain hose	19
502740	Insulation jacket, evaporator	20
00120055	Relay, gearmotor – 220V 60Hz/230V 50Hz	21
502744	Drip cover, gearmotor	22
502939	Evaporator & gearmotor assembly	Not shown

